
 


FIG. 1

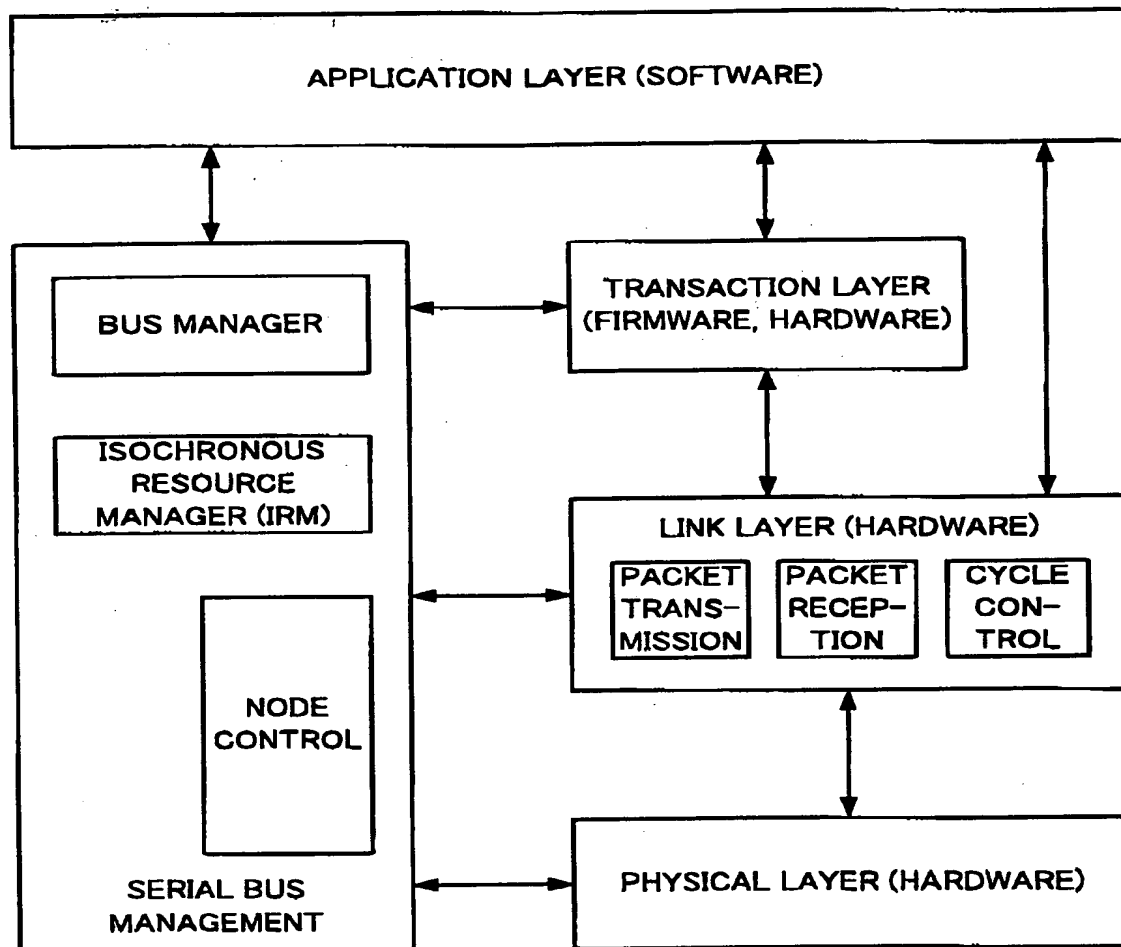 


002707" 54088960

FIG. 2

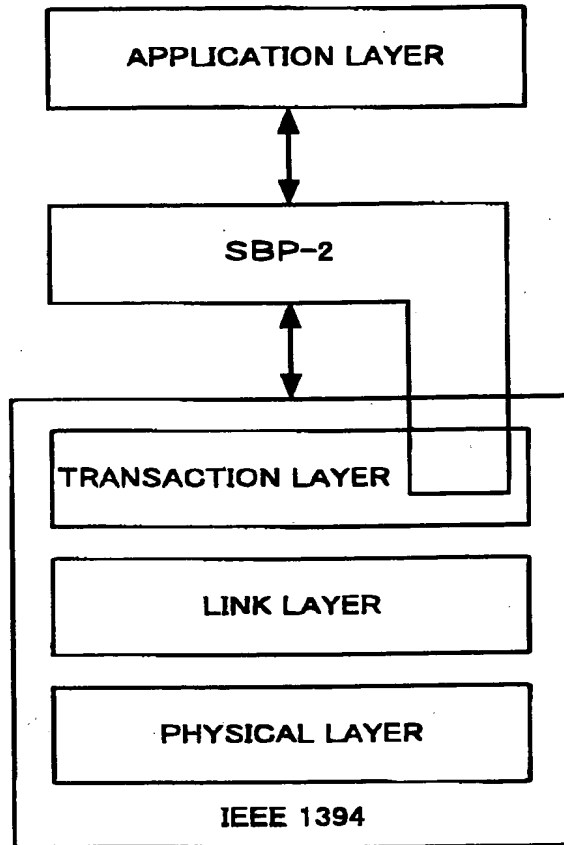


002101 54088950

 FIG. 3

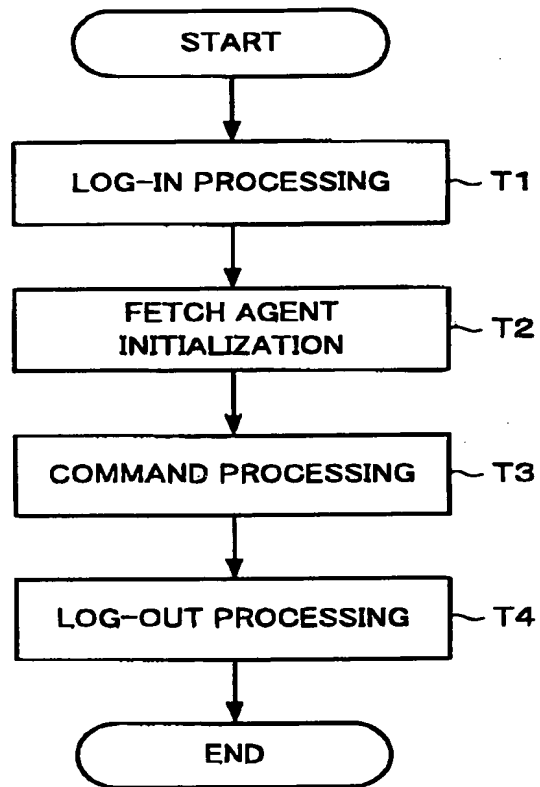


0968045-101200

 FIG. 4

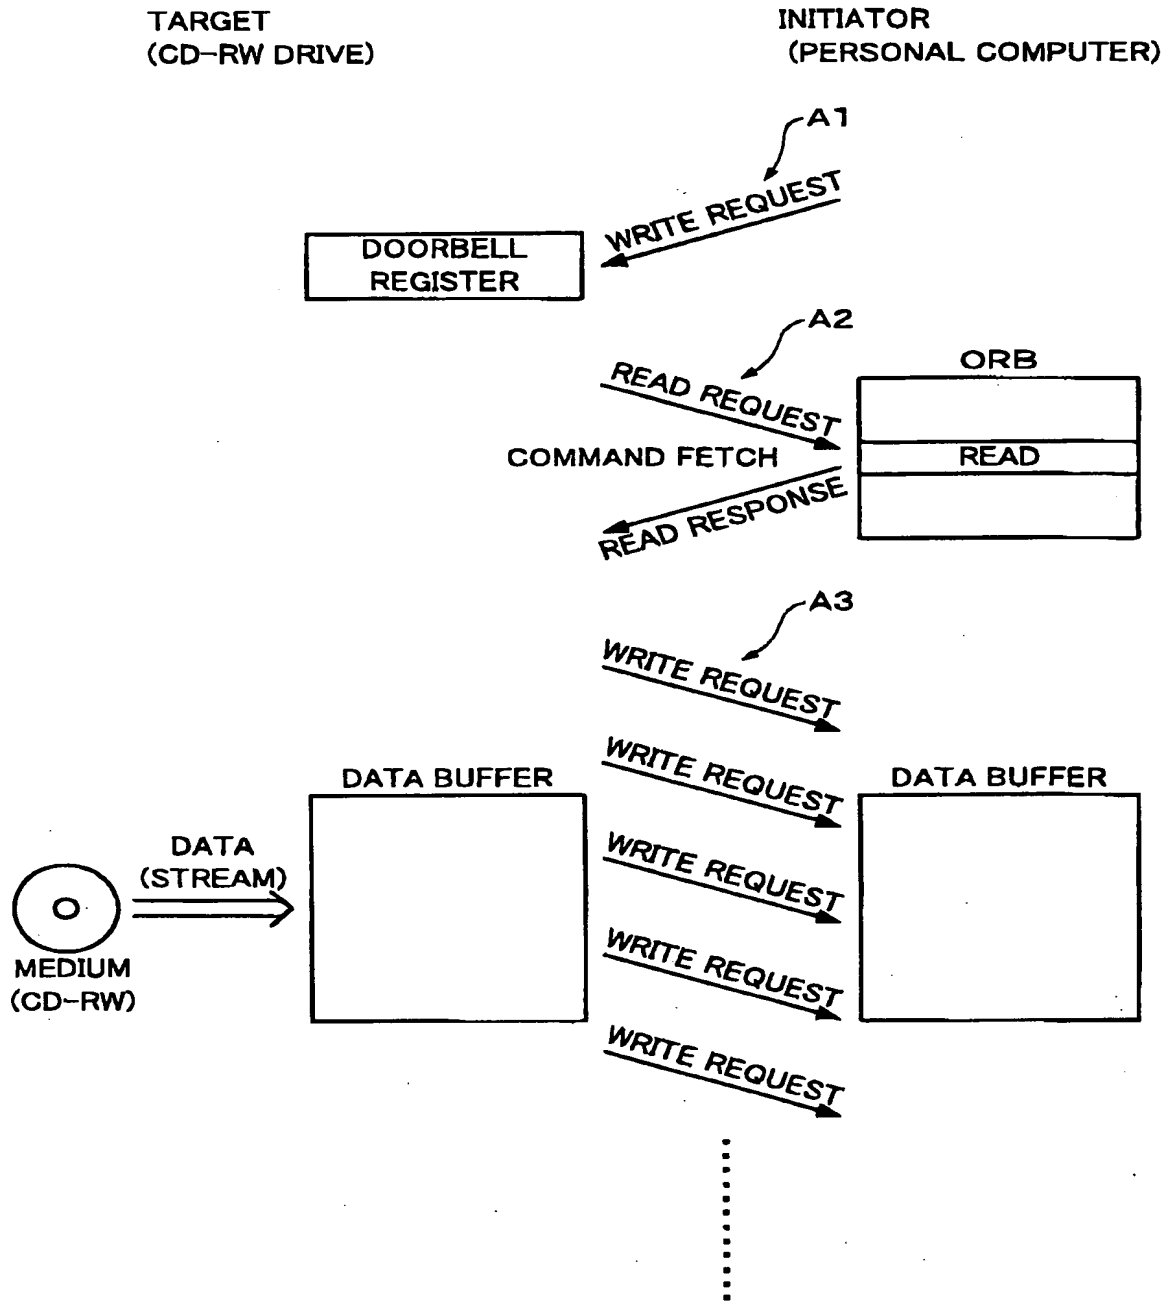


**TARGET**  
**(CD-RW DRIVE)**


**INITIATOR  
(PERSONAL COMPUTER)**

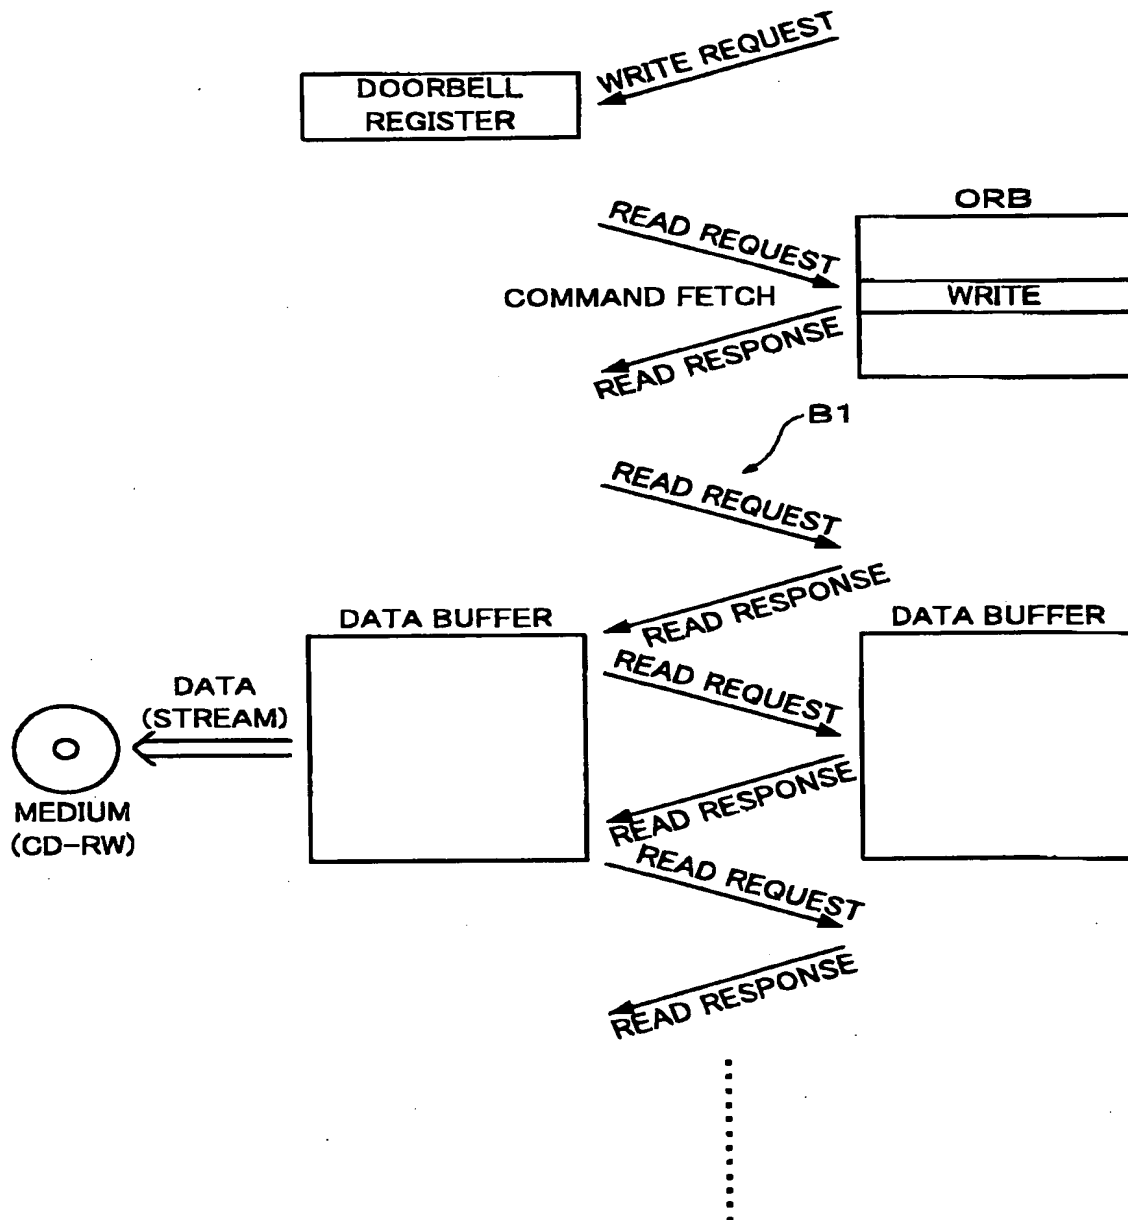 

**FIG. 6A**  
TARGET (SELF NODE)

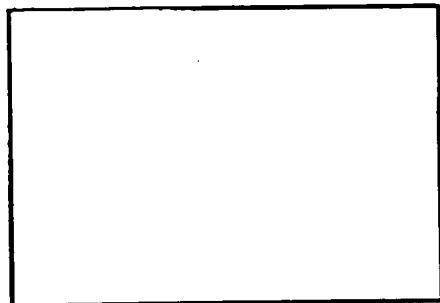 


INITIATOR (ANOTHER NODE)

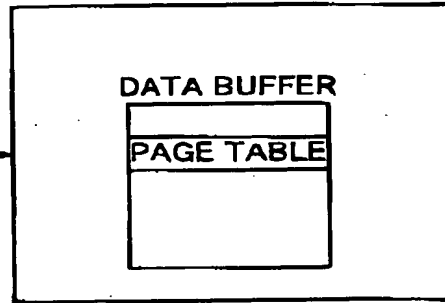 


IEEE 1394

**FIG. 6B**  
WHEN A PAGE TABLE EXISTS

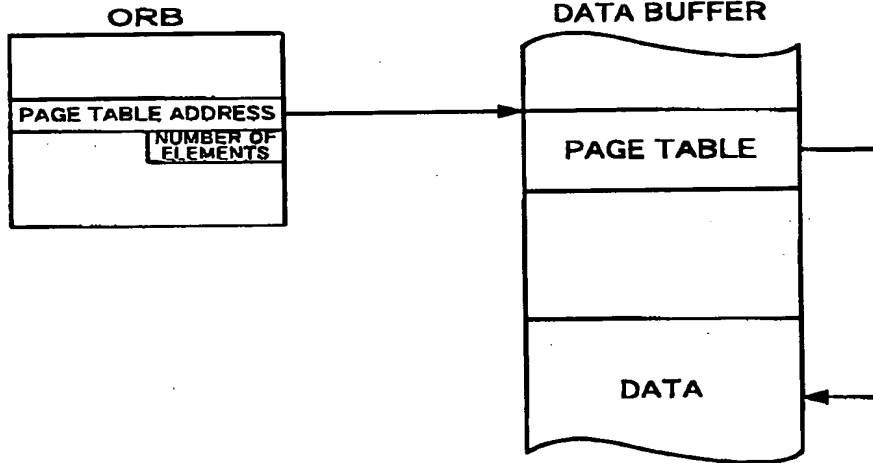 

**FIG. 6C**  
WHEN NO PAGE TABLE EXISTS

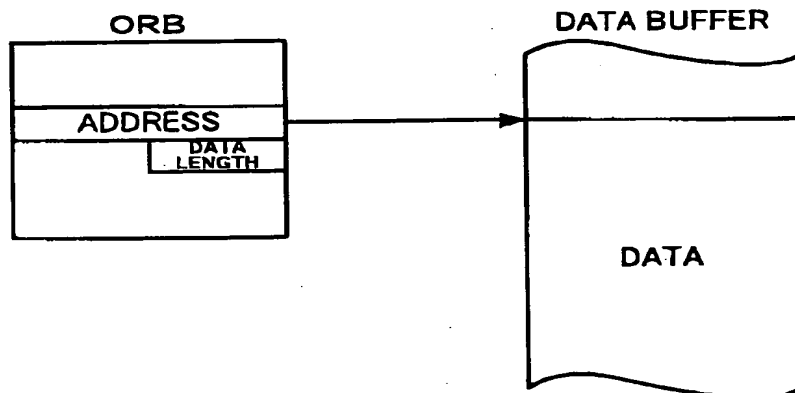 

7. G. L.


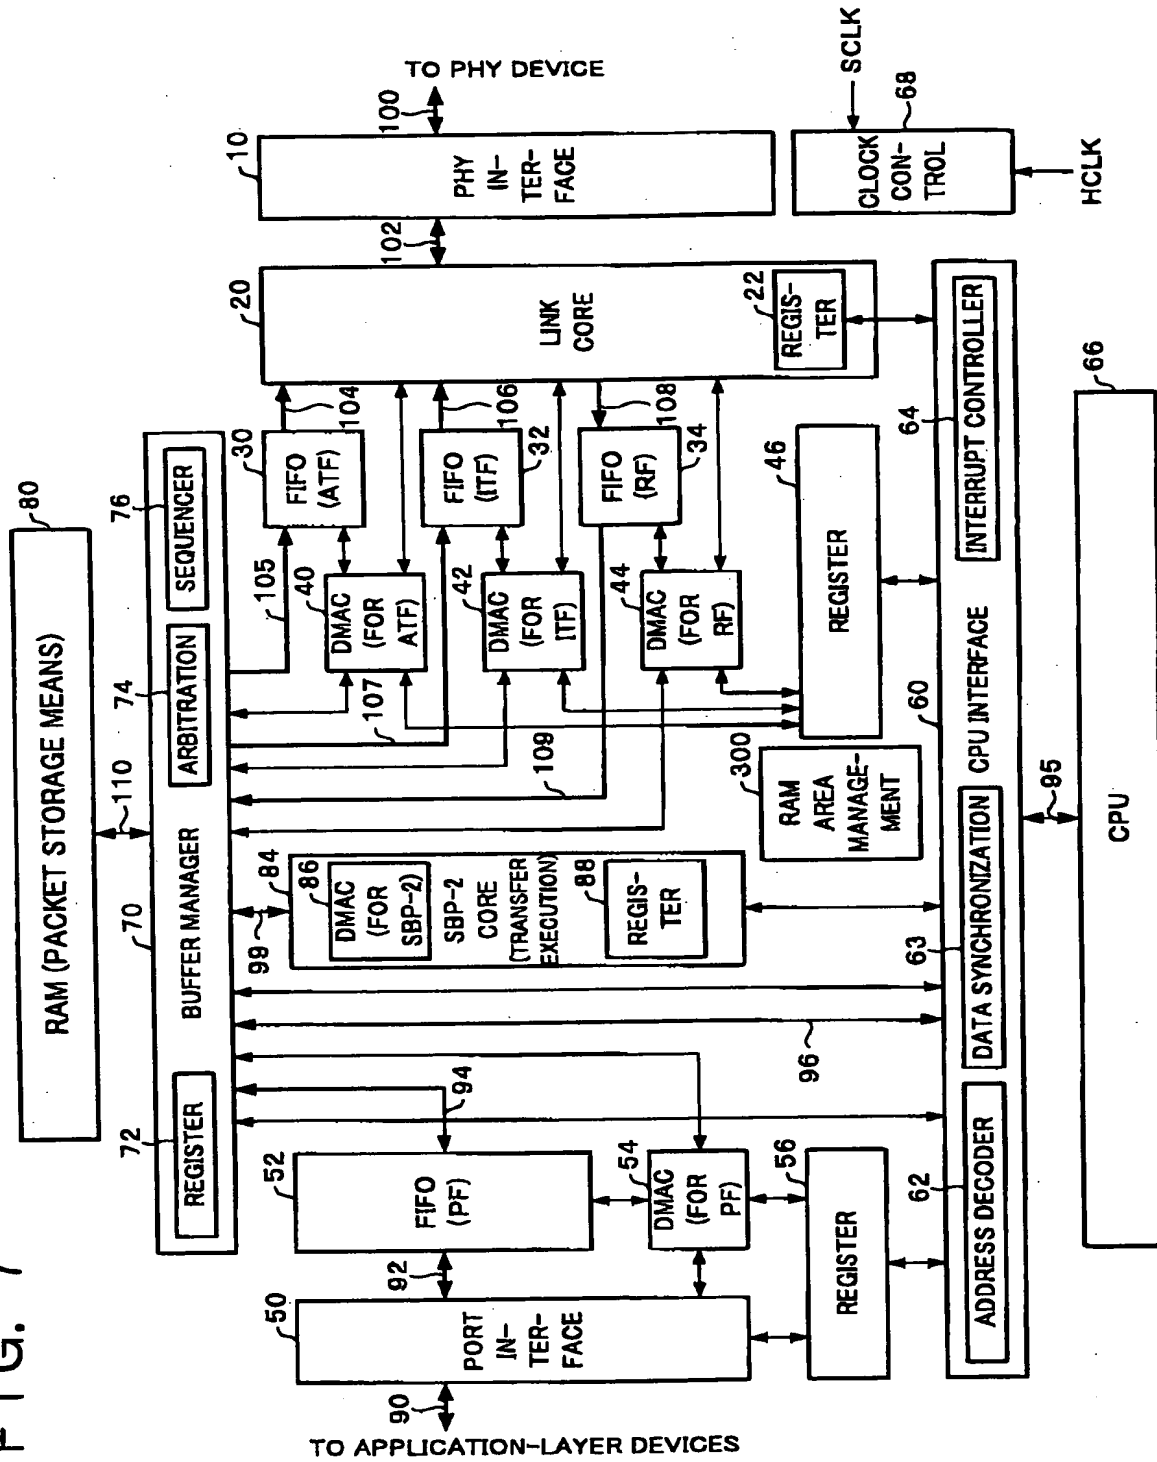 



FIG. 8

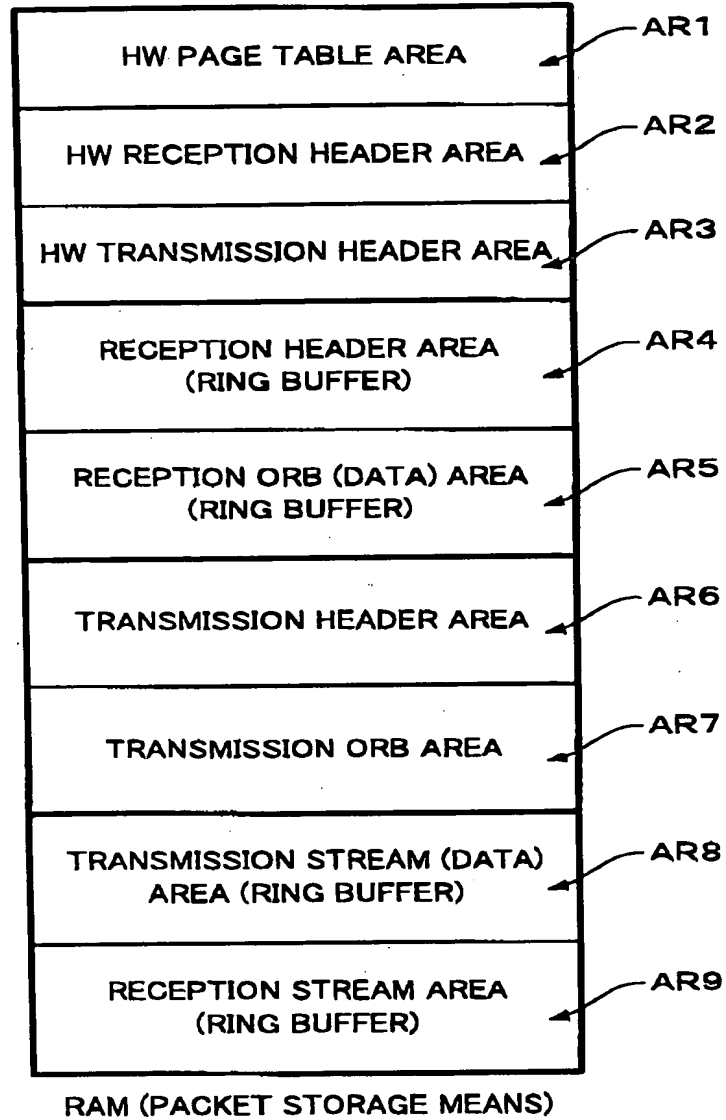 

09688045-101200



 FIG. 9

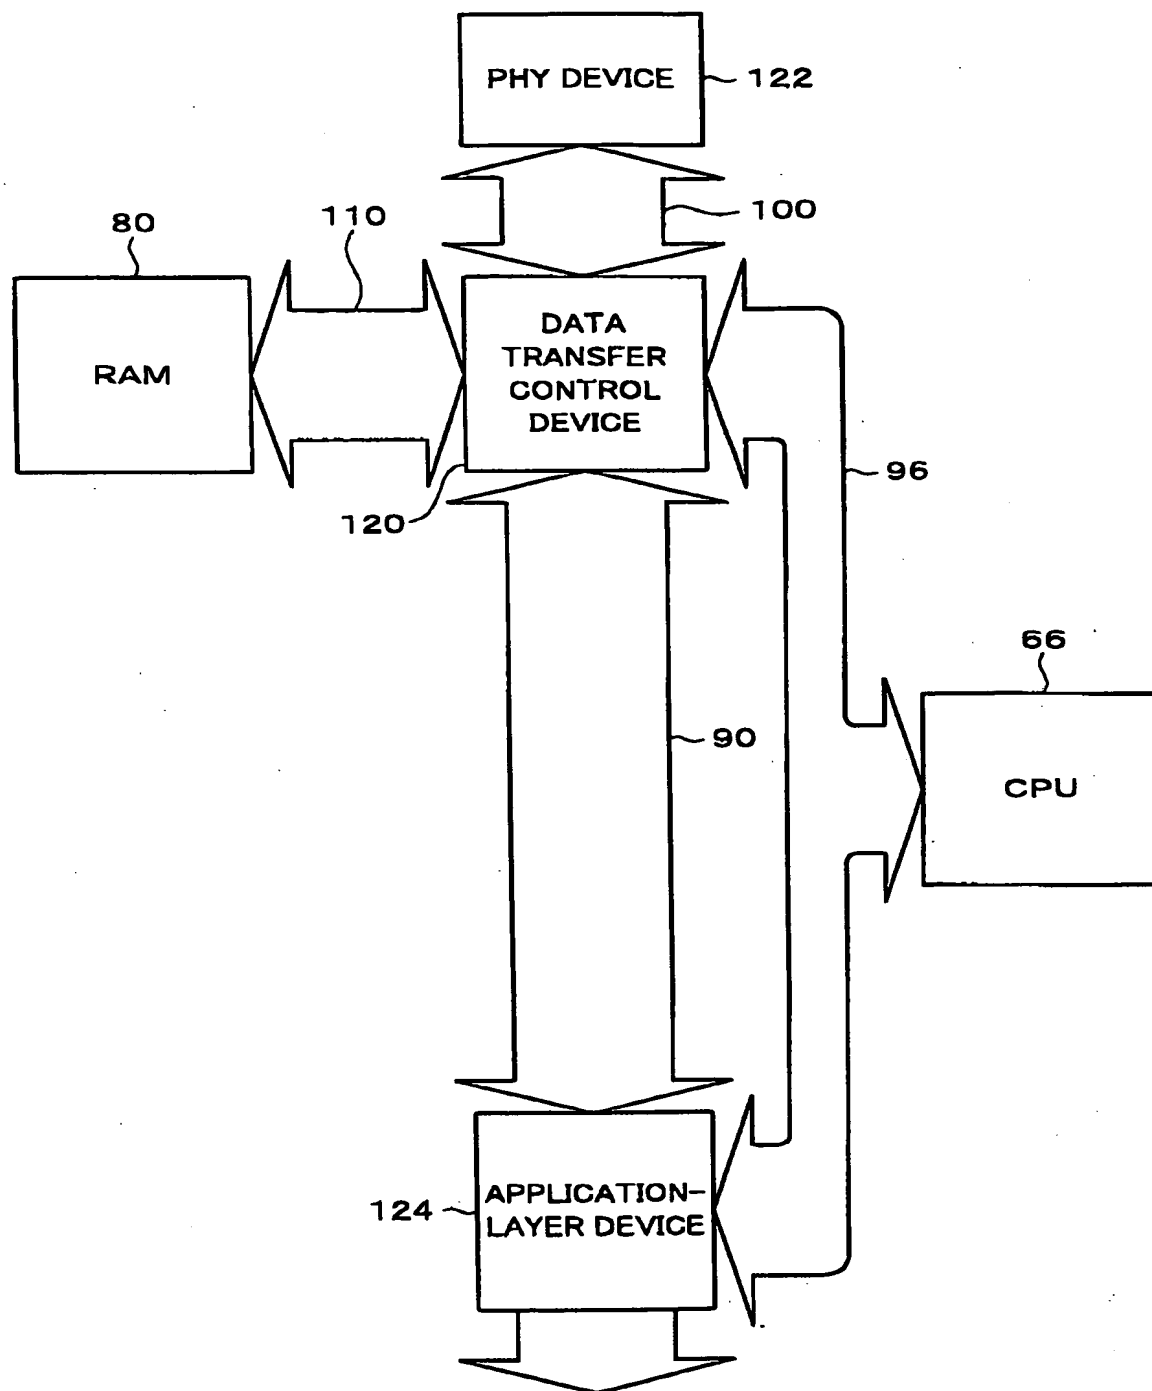

09688045 "101200

FIG. 10



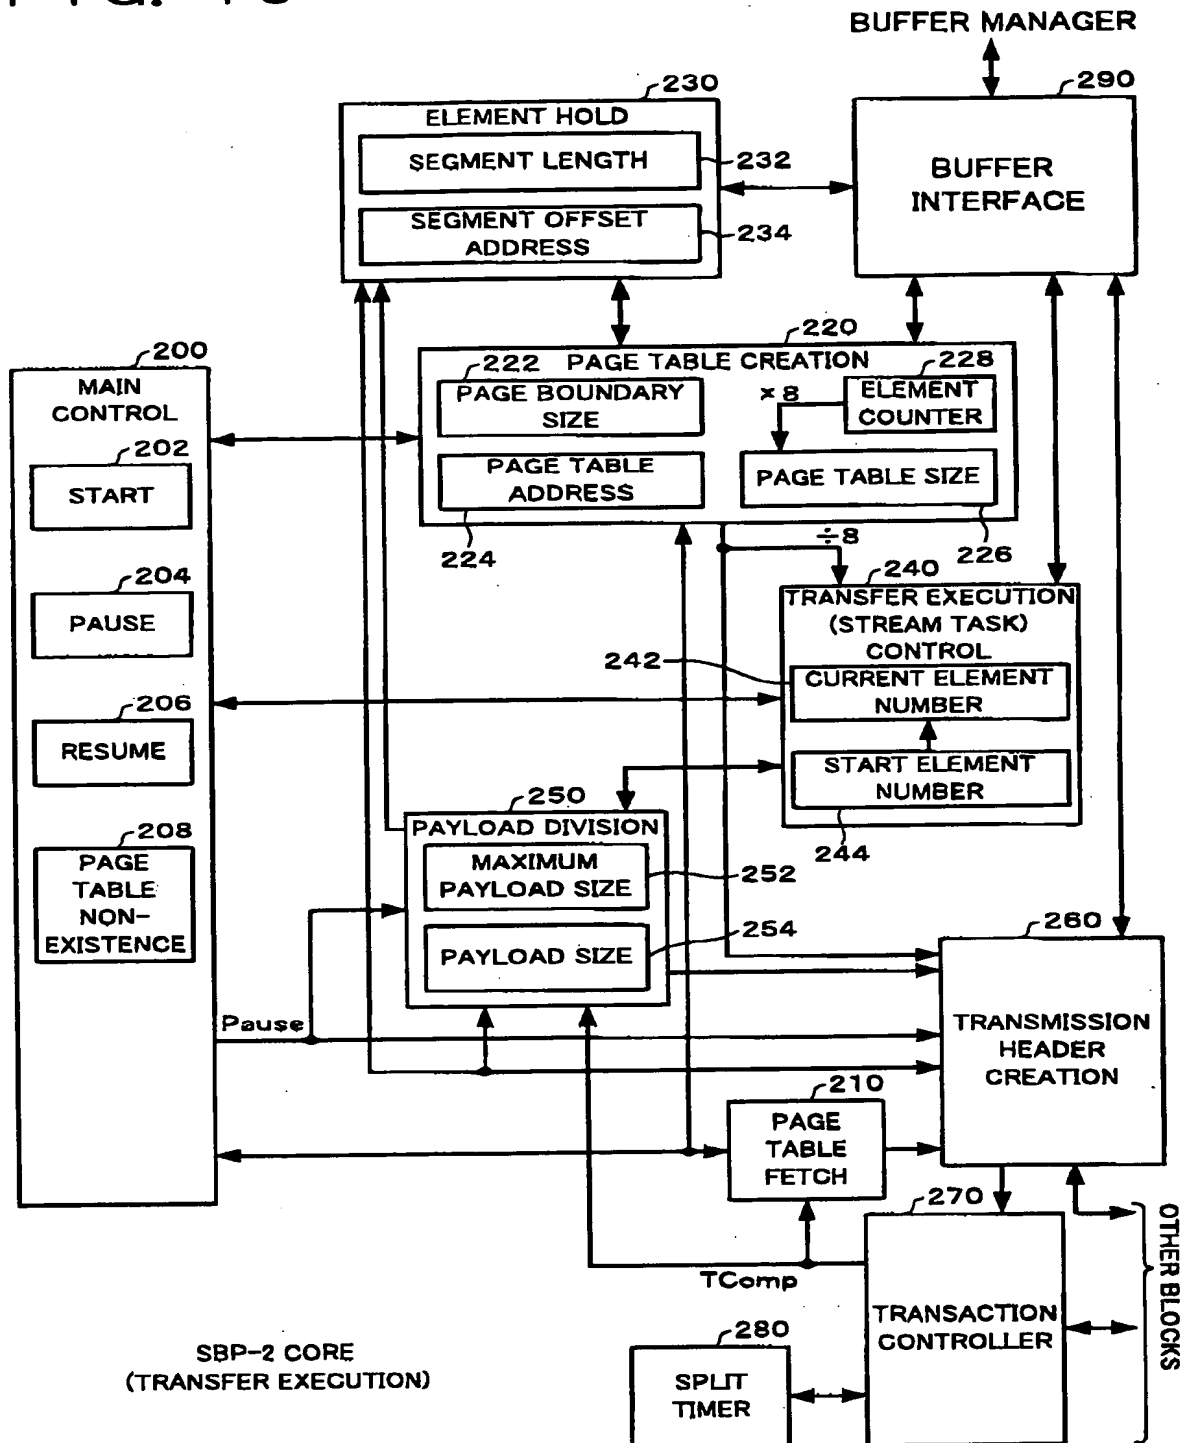 


FIG. 11

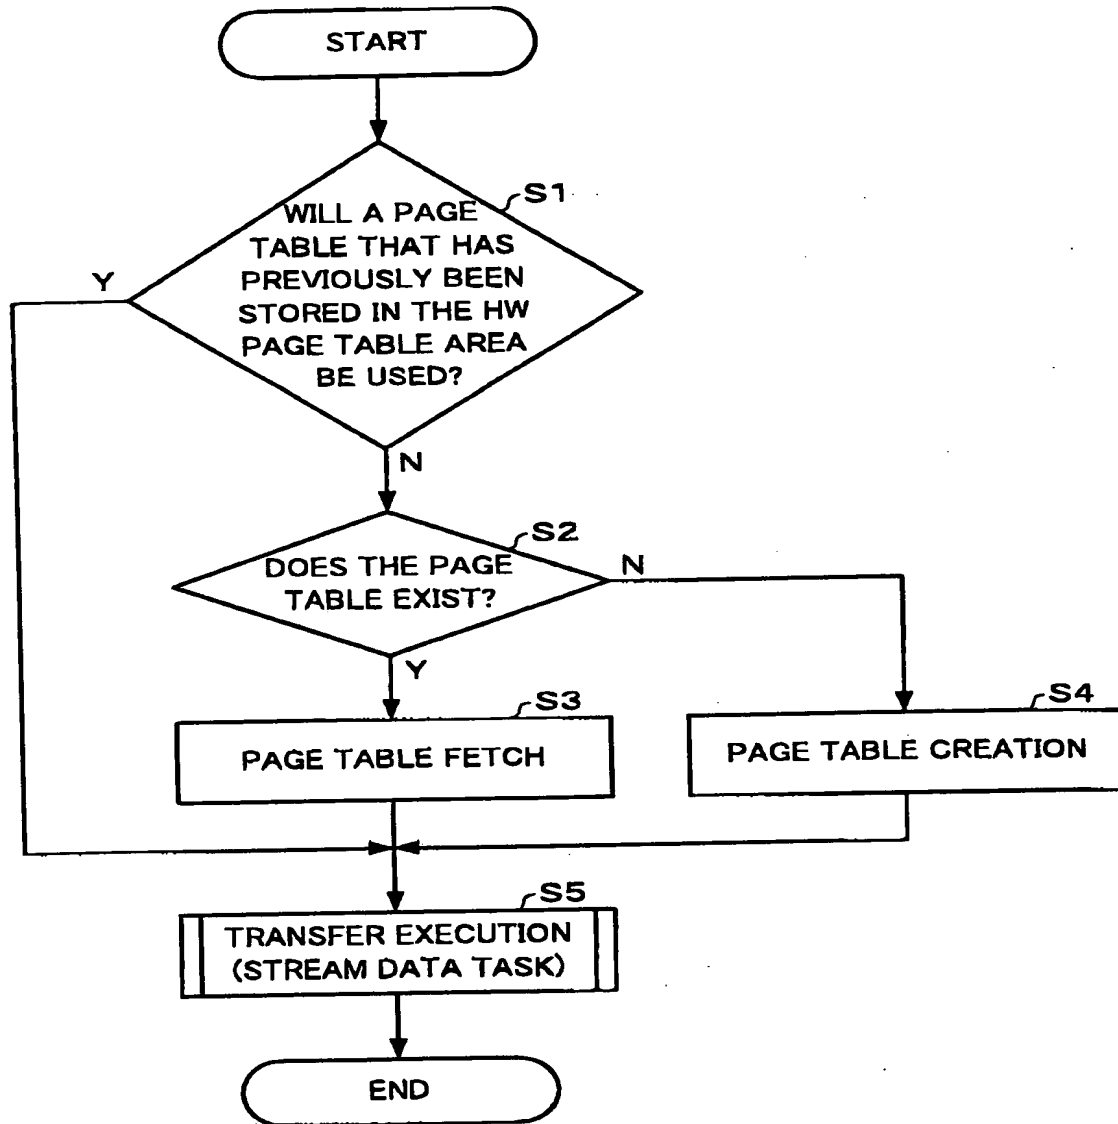 


00688045 101200

 FIG. 12

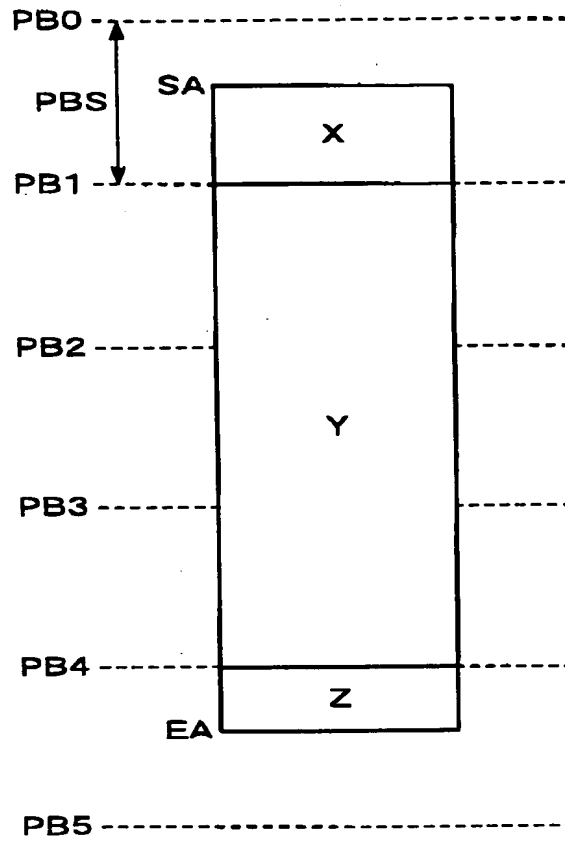


002101" 54083960

 FIG. 13

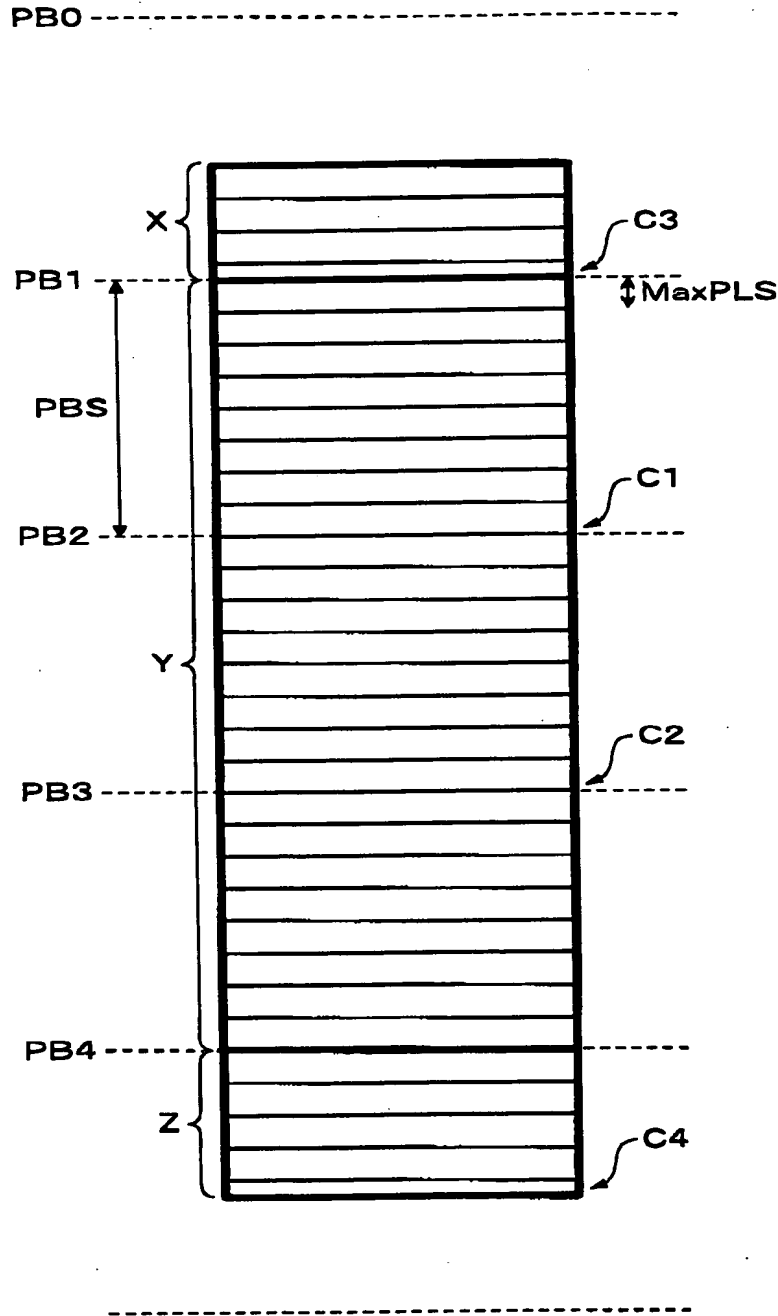

002101 54088960

 FIG. 14

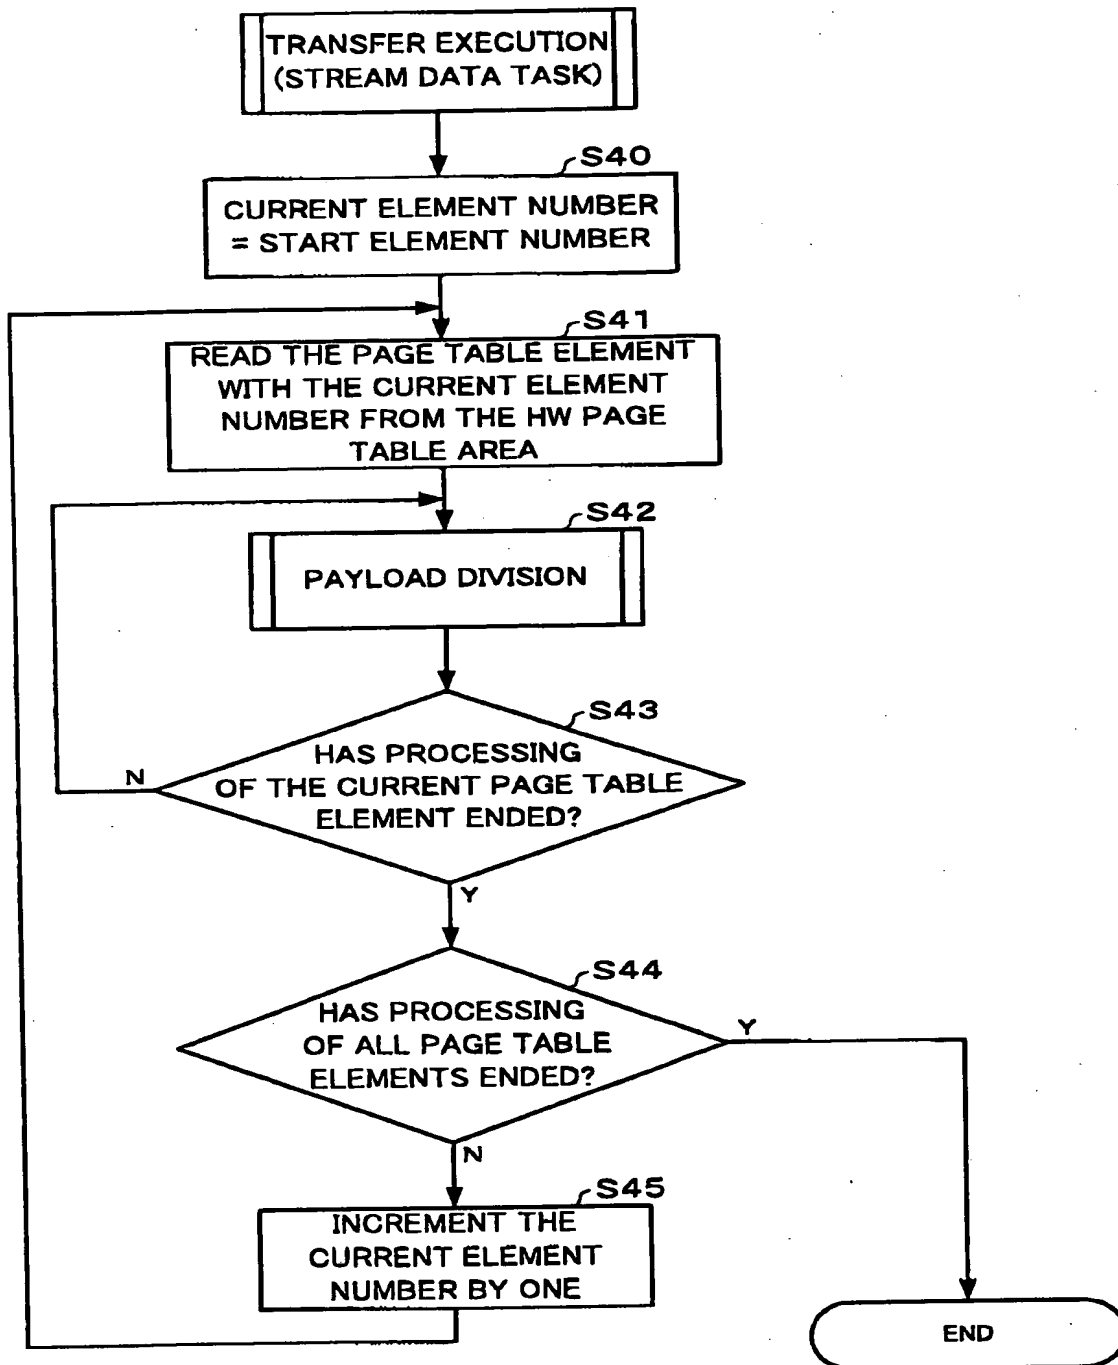

09688045.10200

FIG. 15


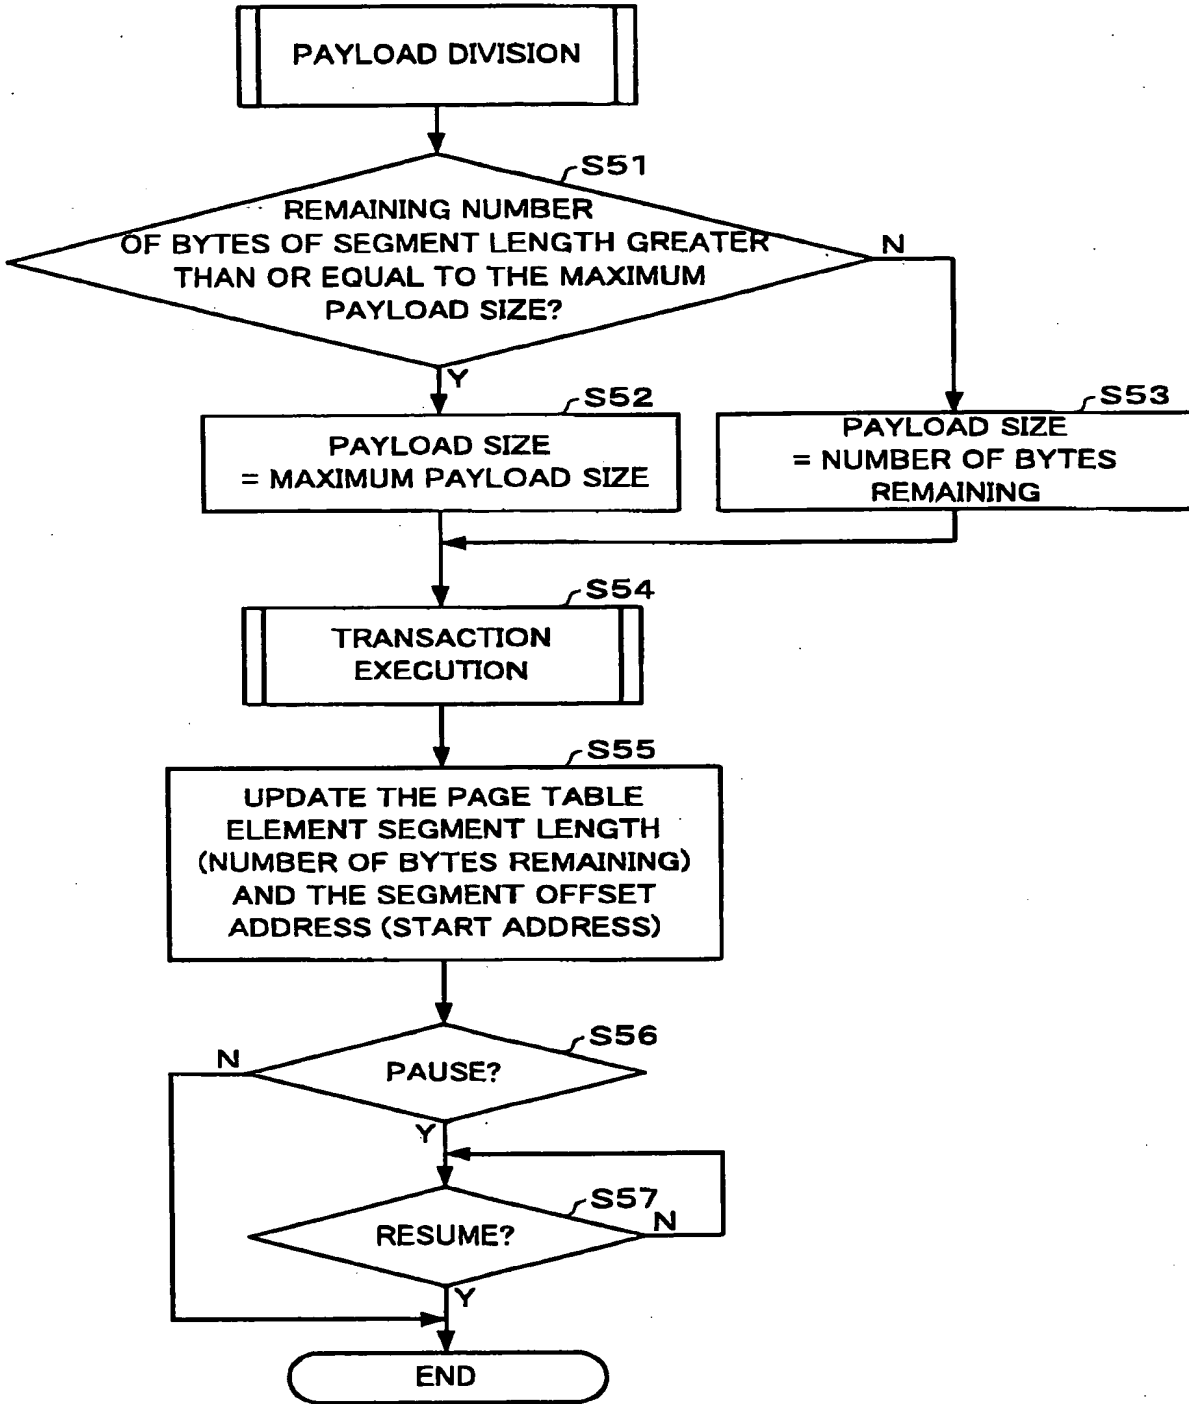 


FIG. 16

 
16/30

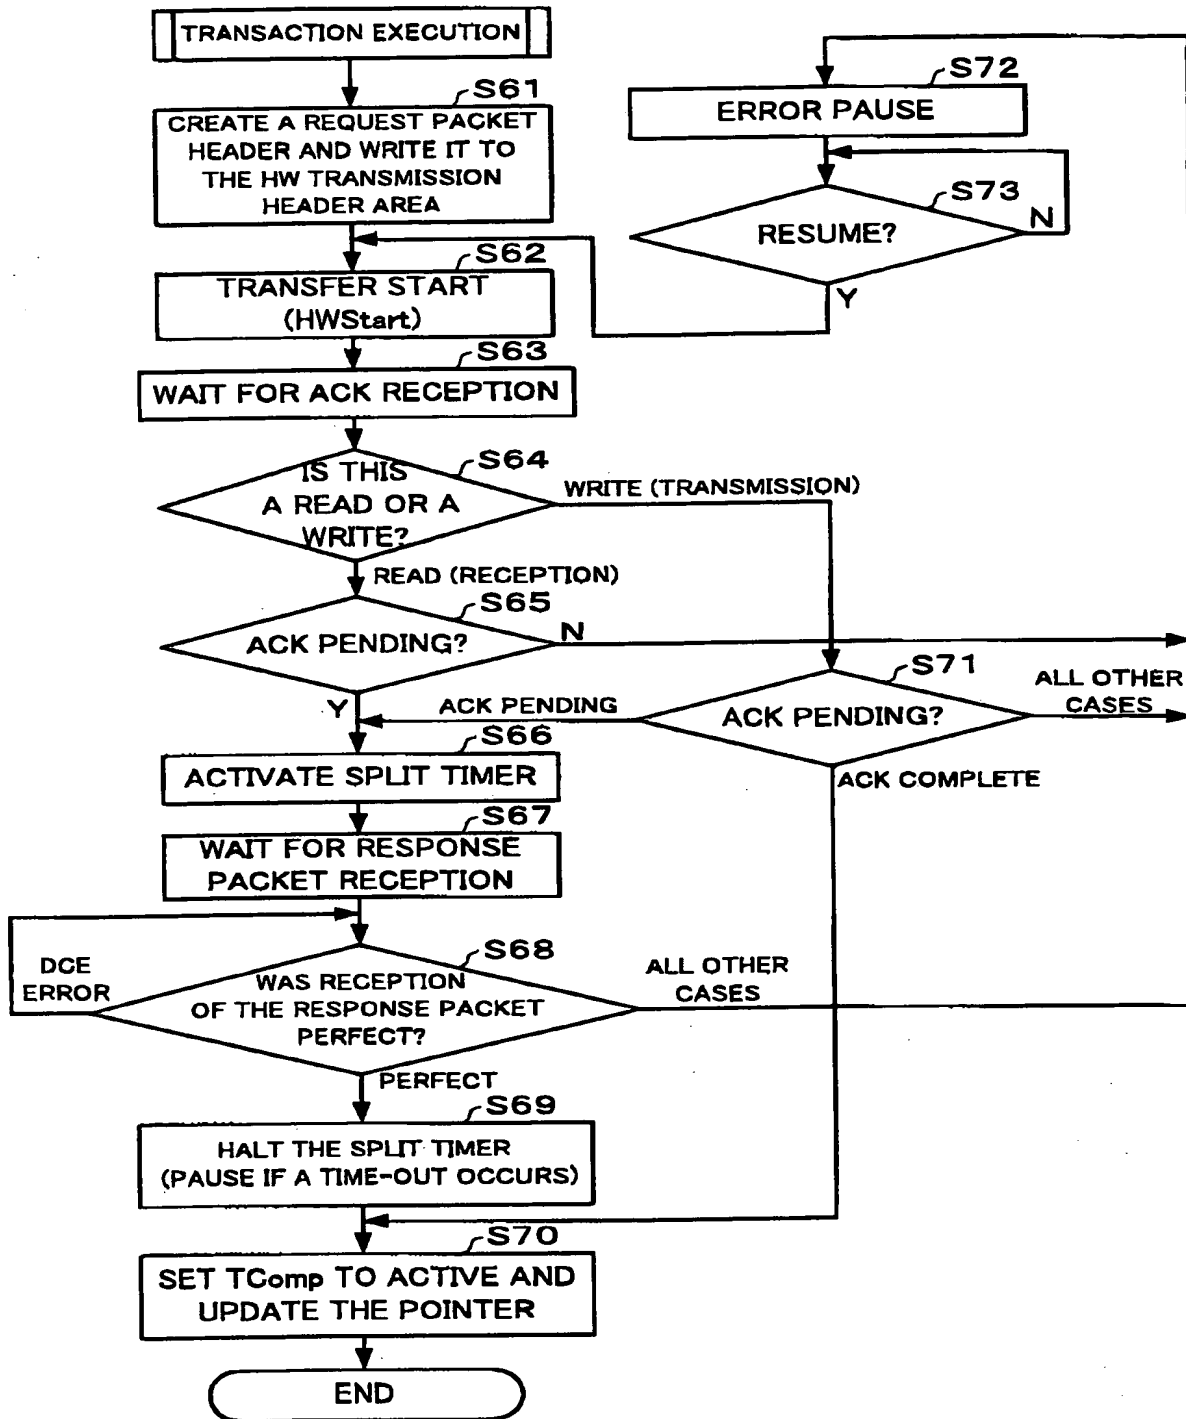

09683045-101200



 FIG. 17

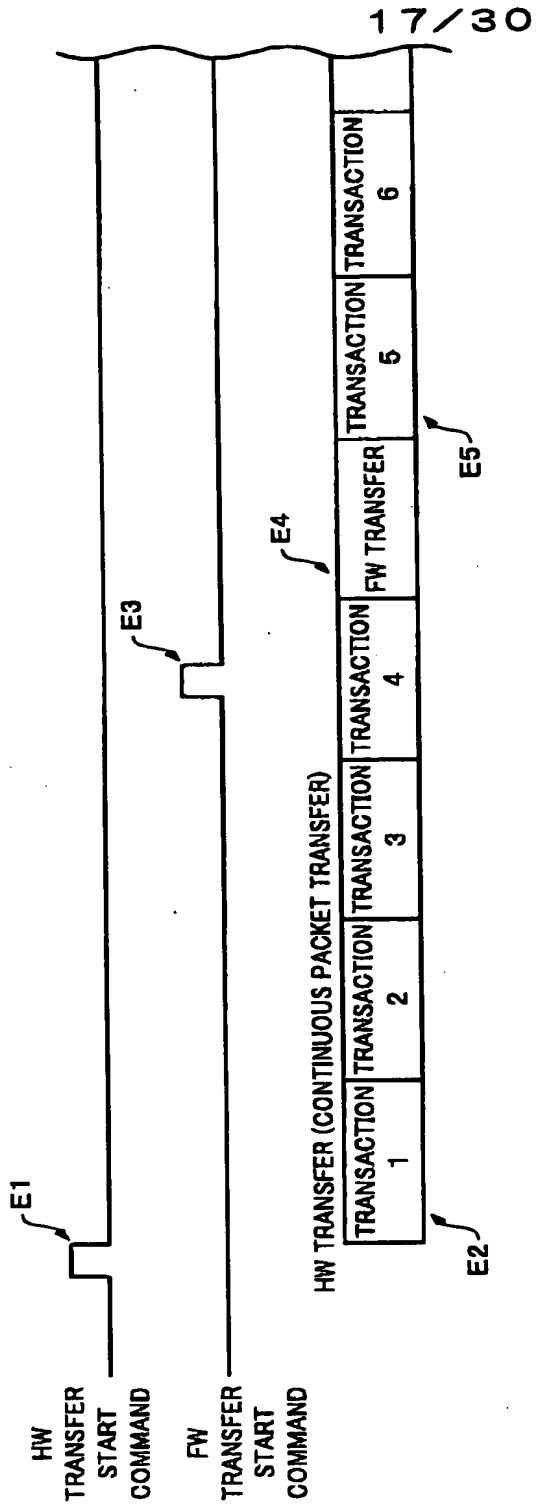

002F0T"SH0889560

FIG. 18

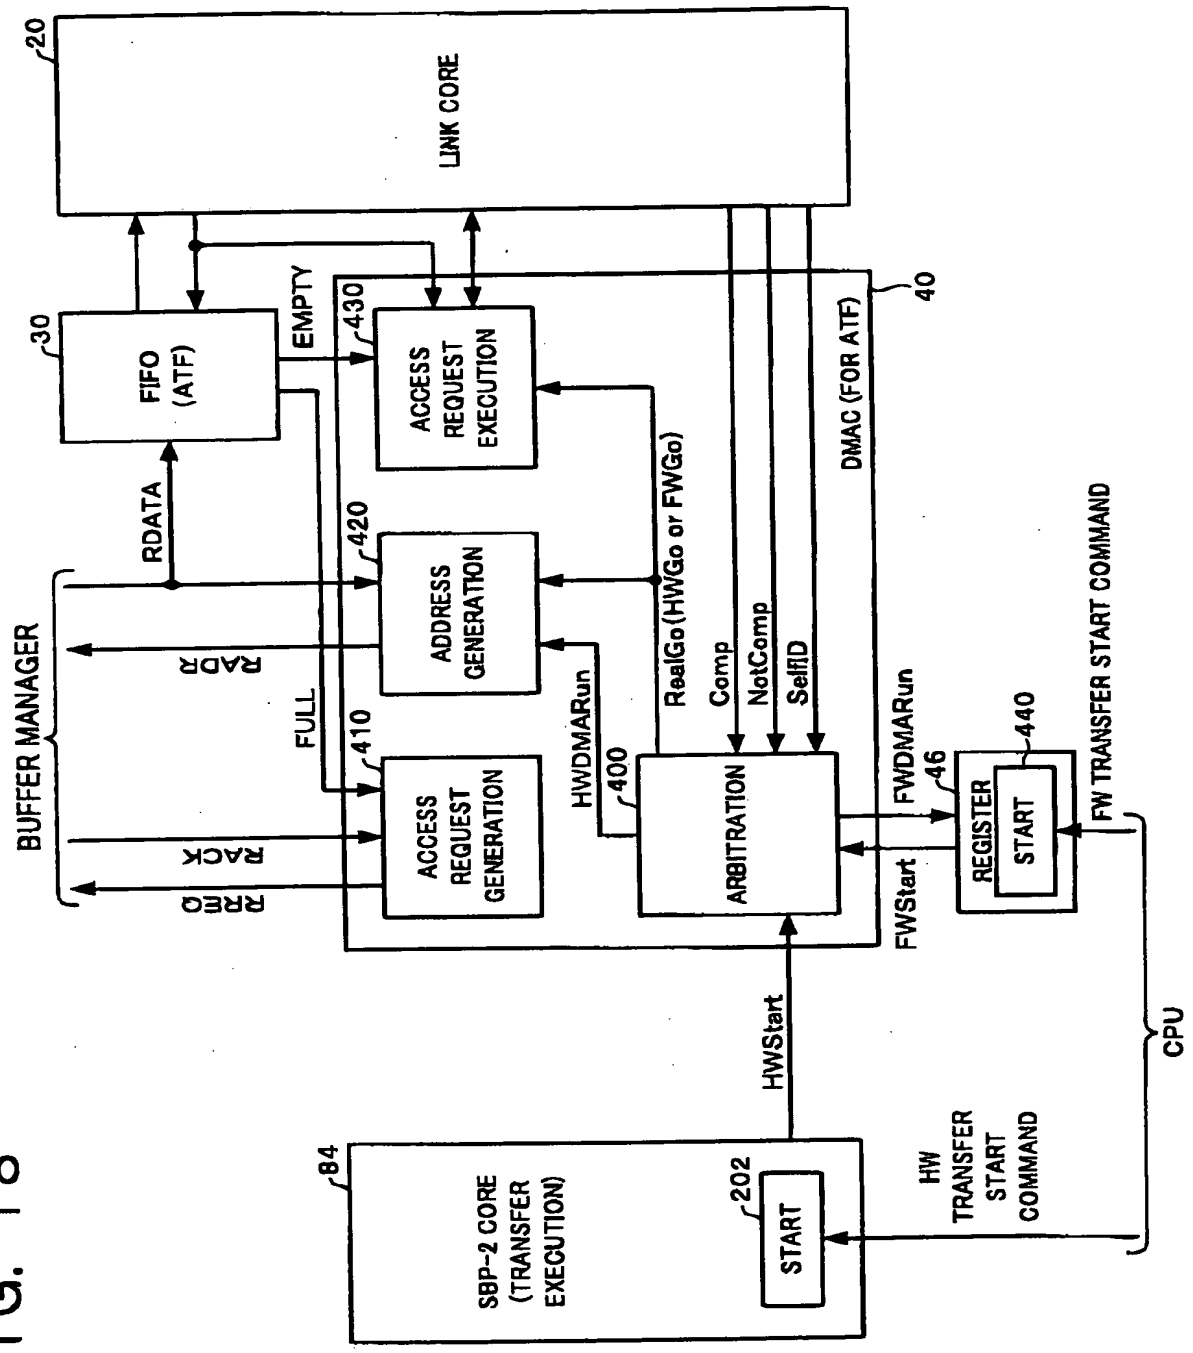 


FIG. 19A

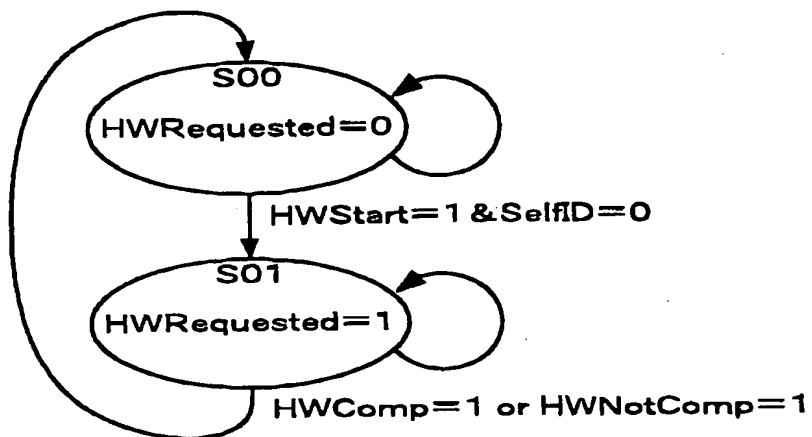 


FIG. 19B

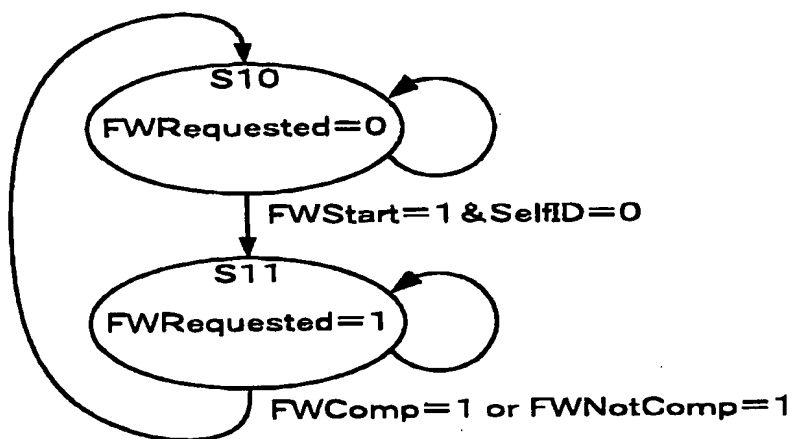 


FIG. 20


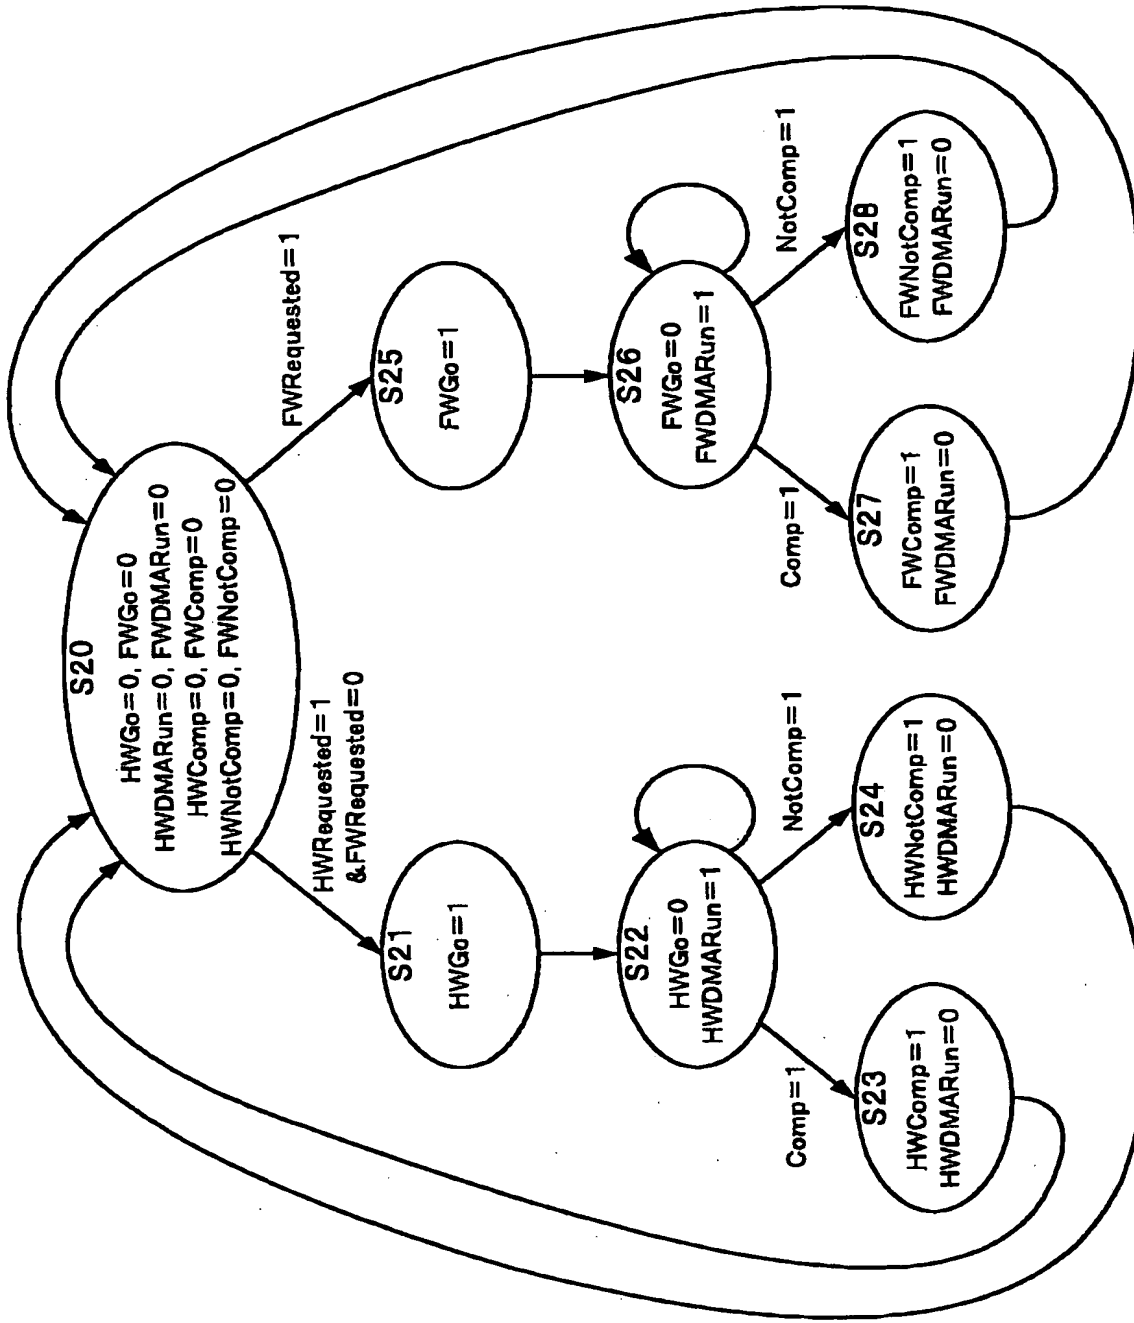 


FIG. 21

 WHEN HWStart GOES ACTIVE FIRST

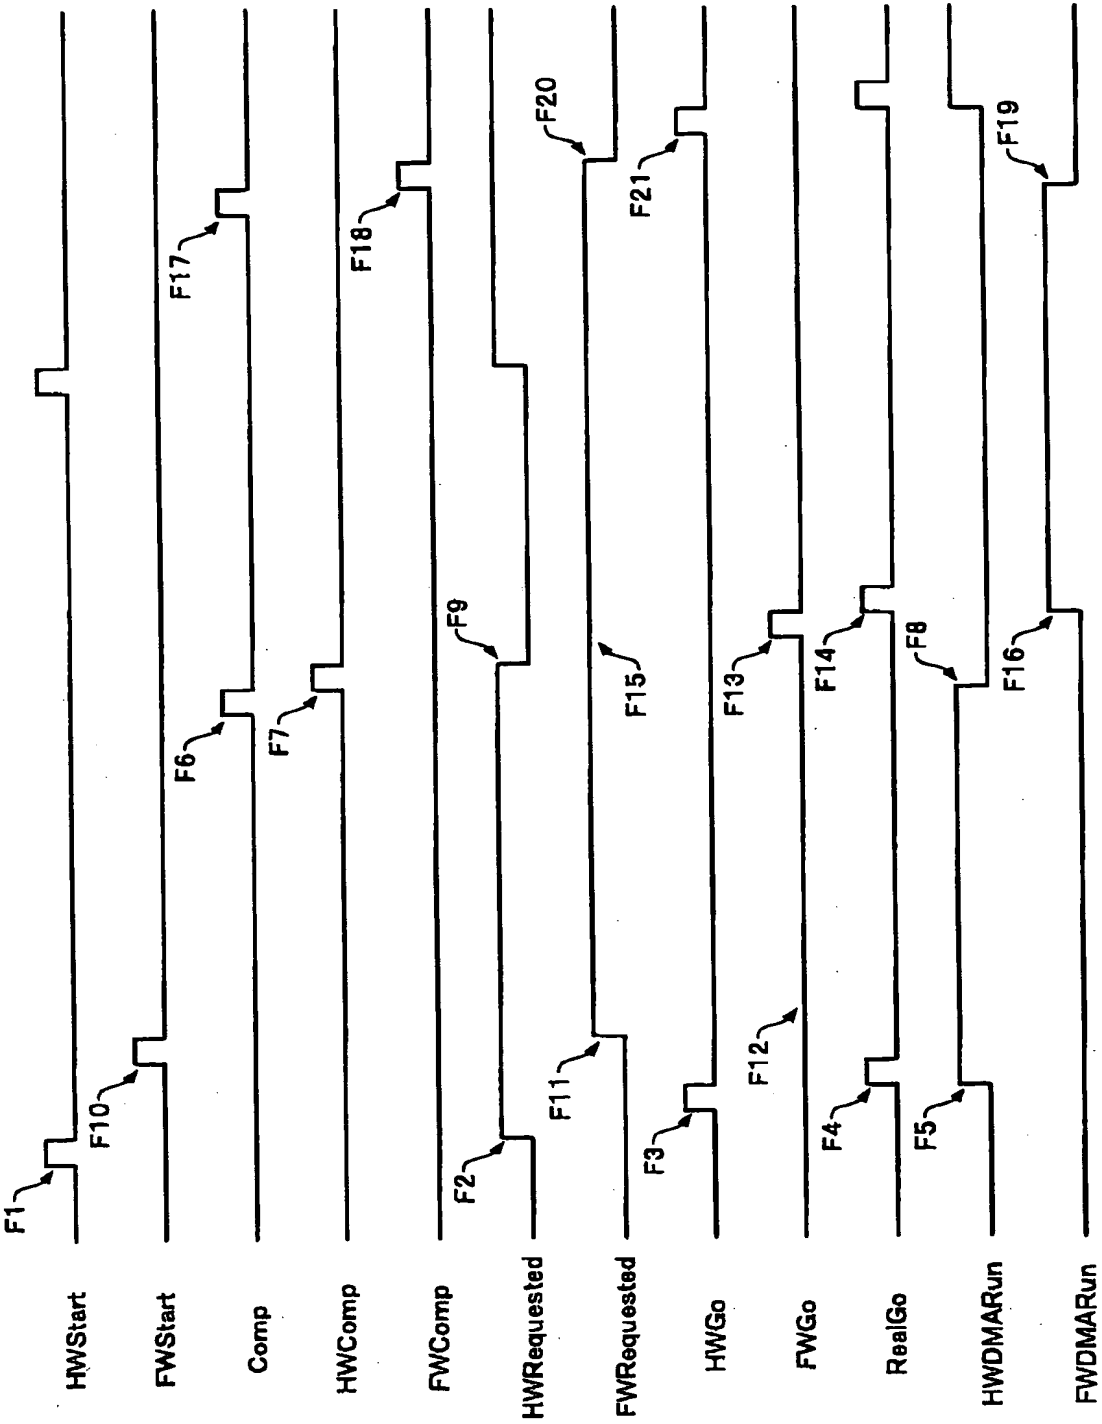

002TDT" SH088960

FIG. 22

WHEN HWStart AND FWStart GO ACTIVE TOGETHER

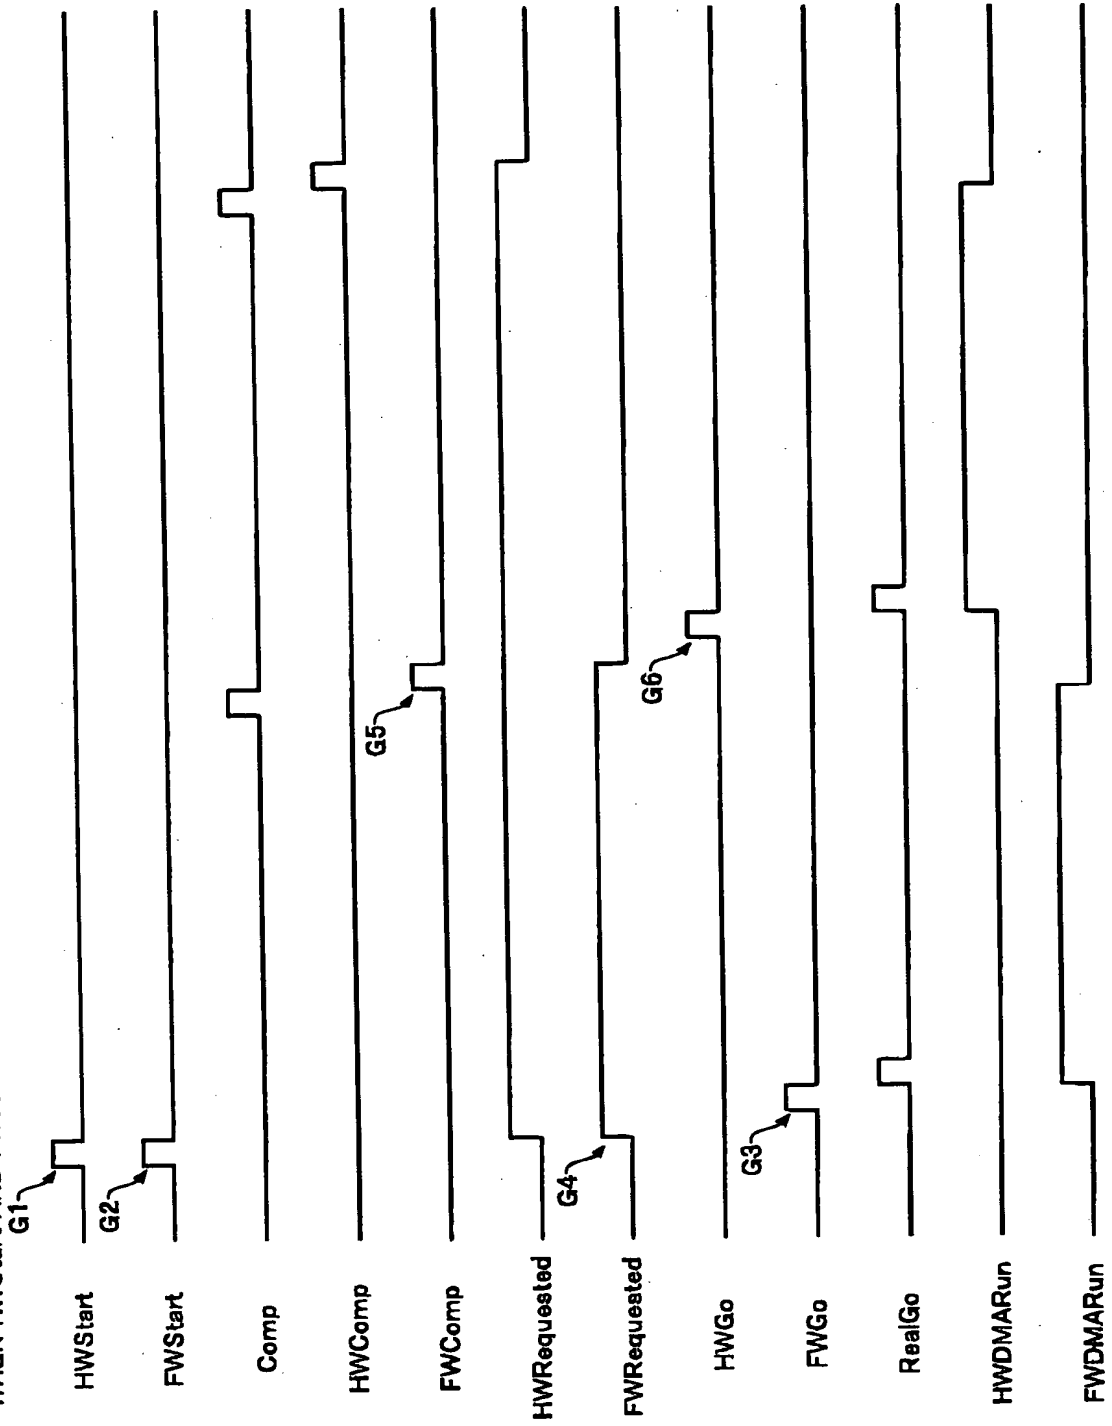 


FIG. 23

WHEN FWStart GOES ACTIVE FIRST

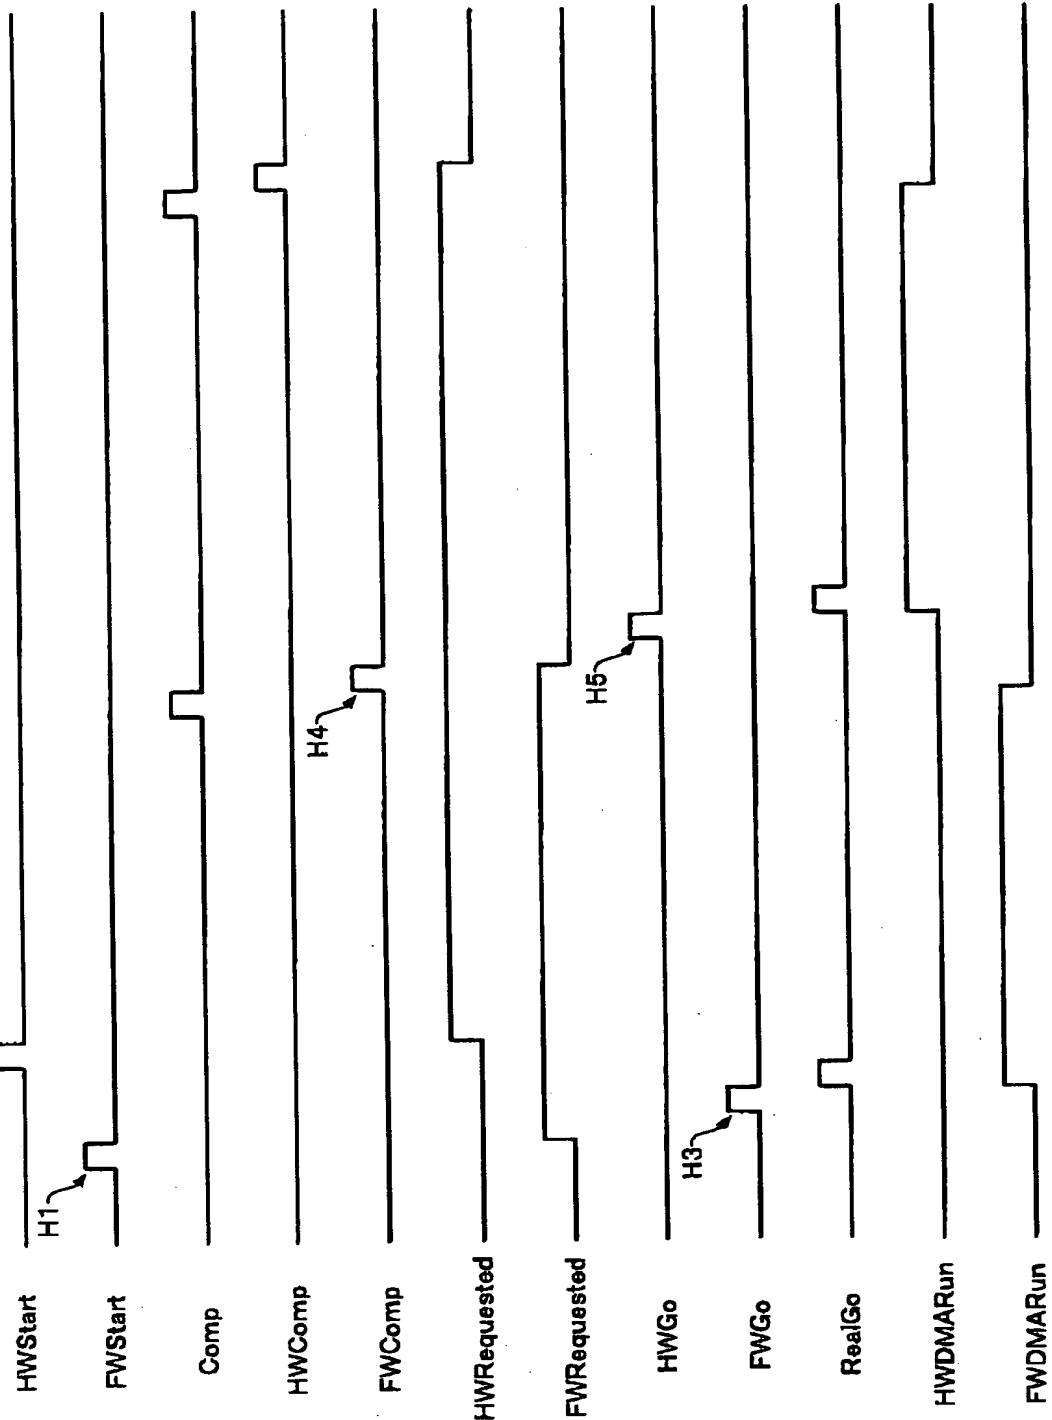 


FIG. 24


 
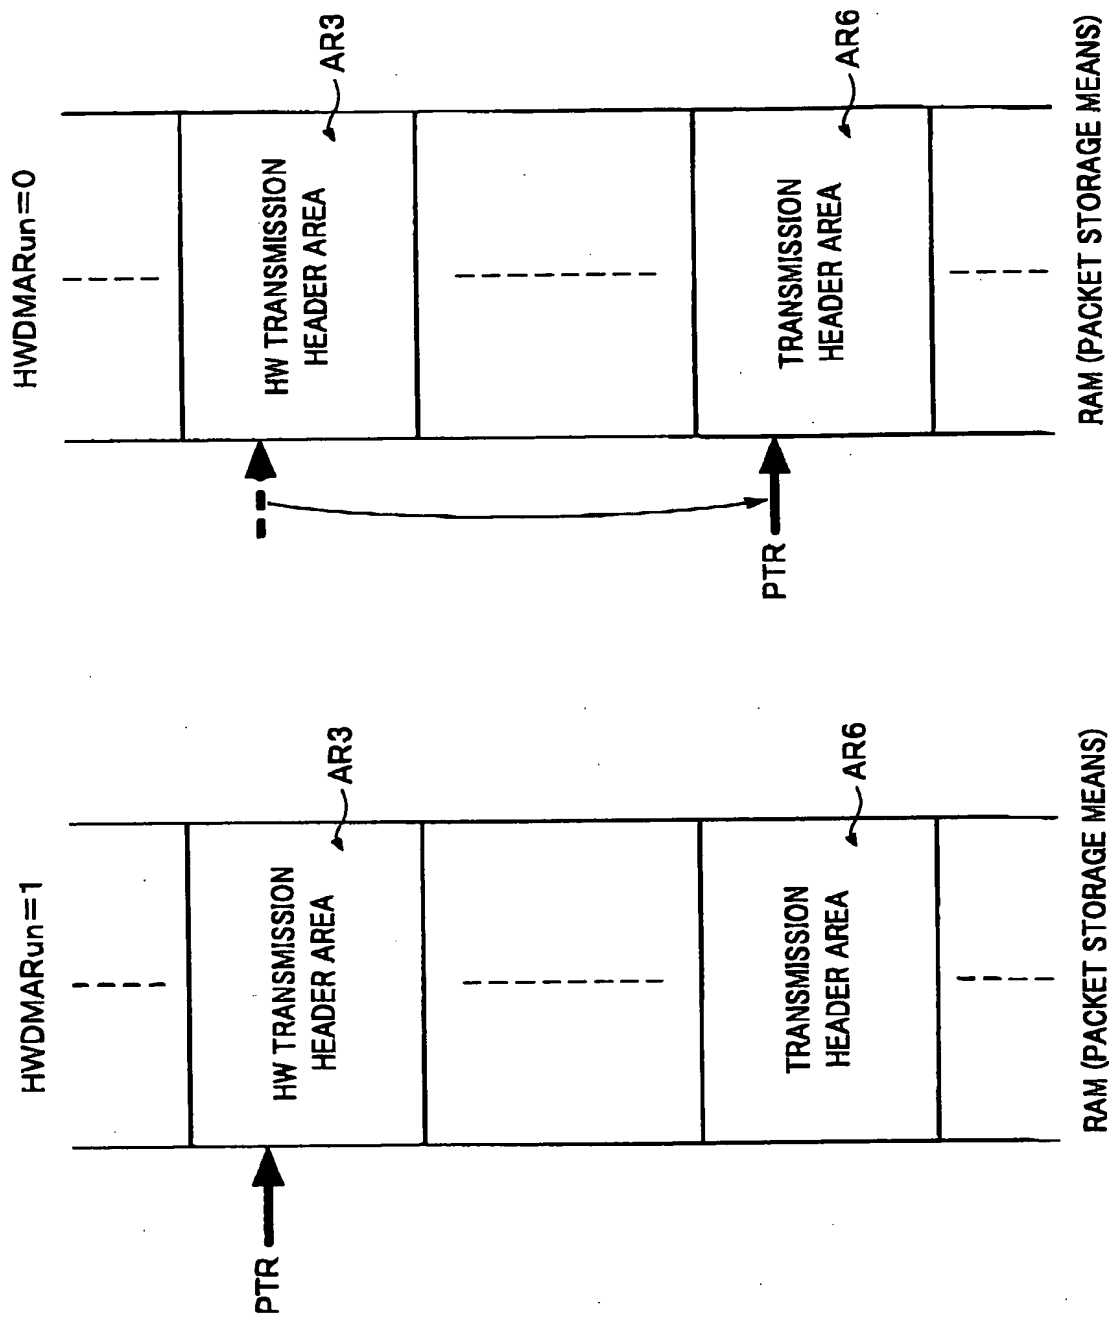 




FIG. 25A

 FIG. 25B

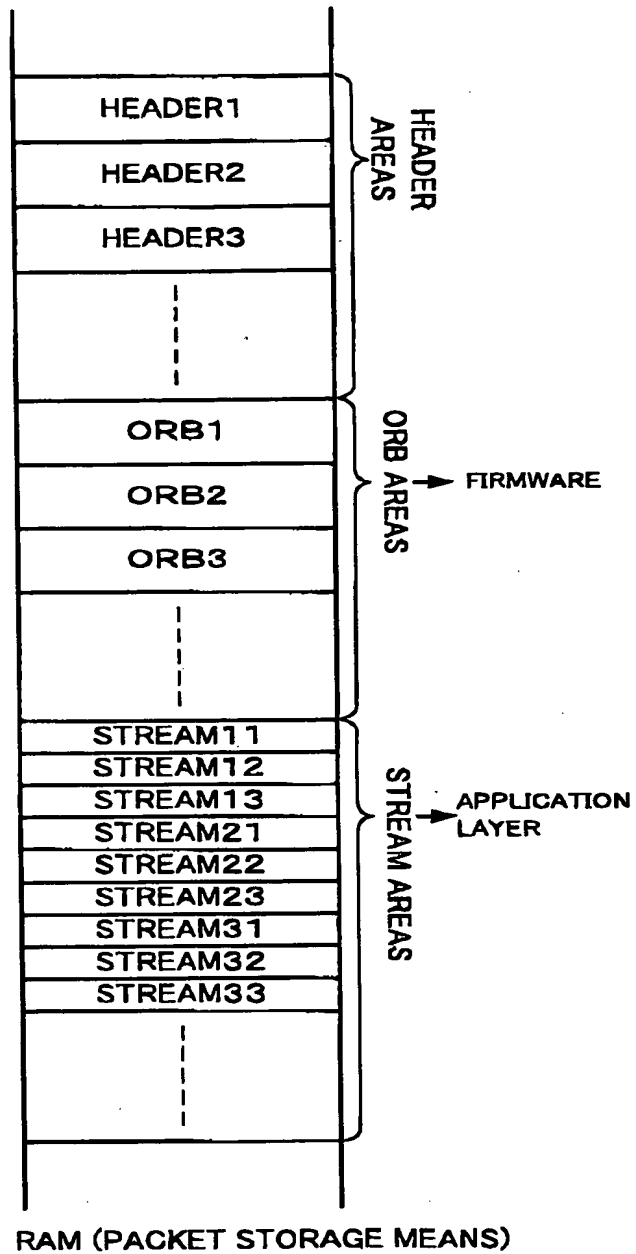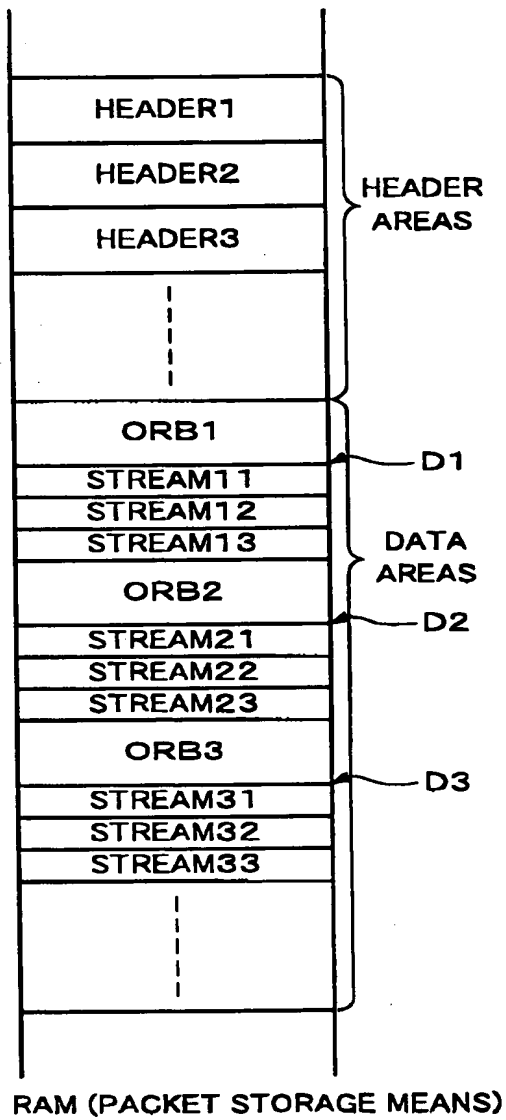

09688045-101200

FIG. 26

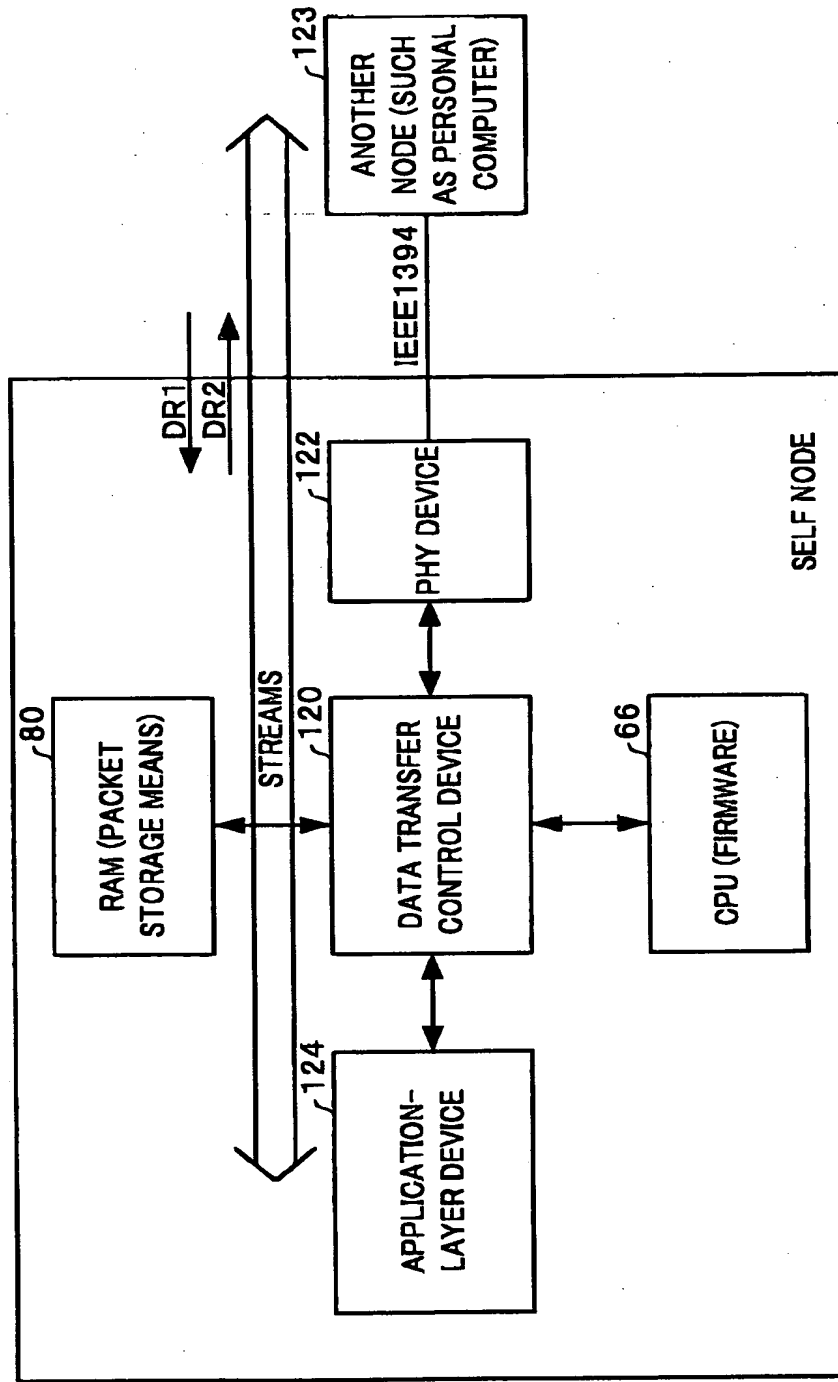 


FIG. 27A

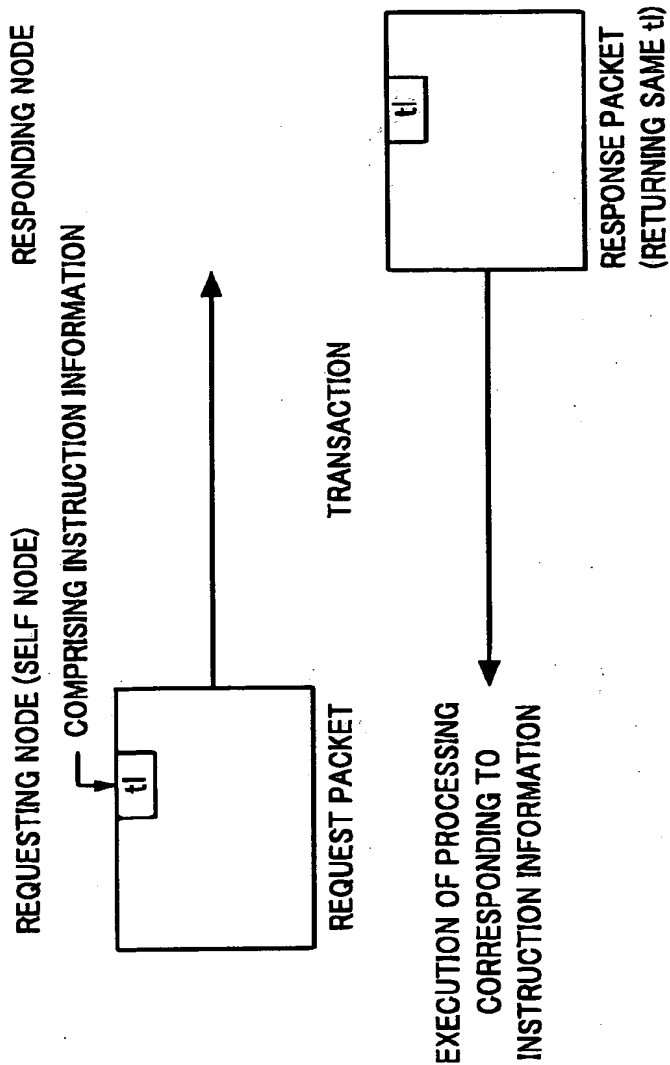 


FIG. 27B

tl (TRANSACTION LABEL)


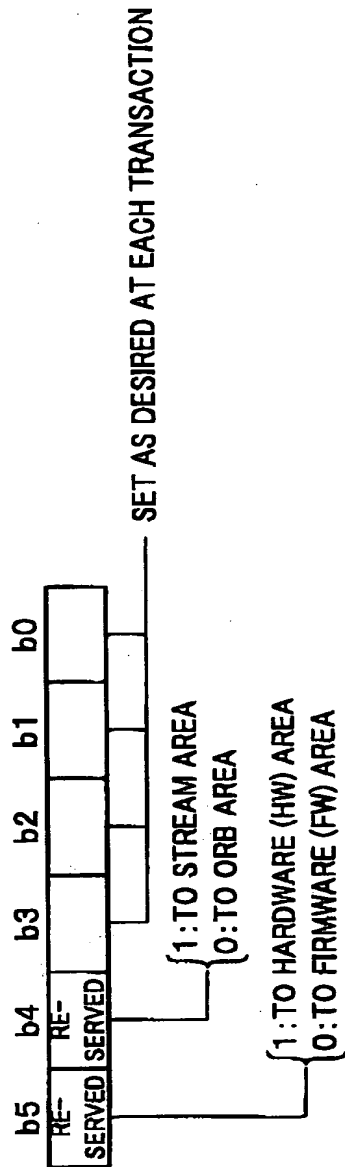 


FIG. 28

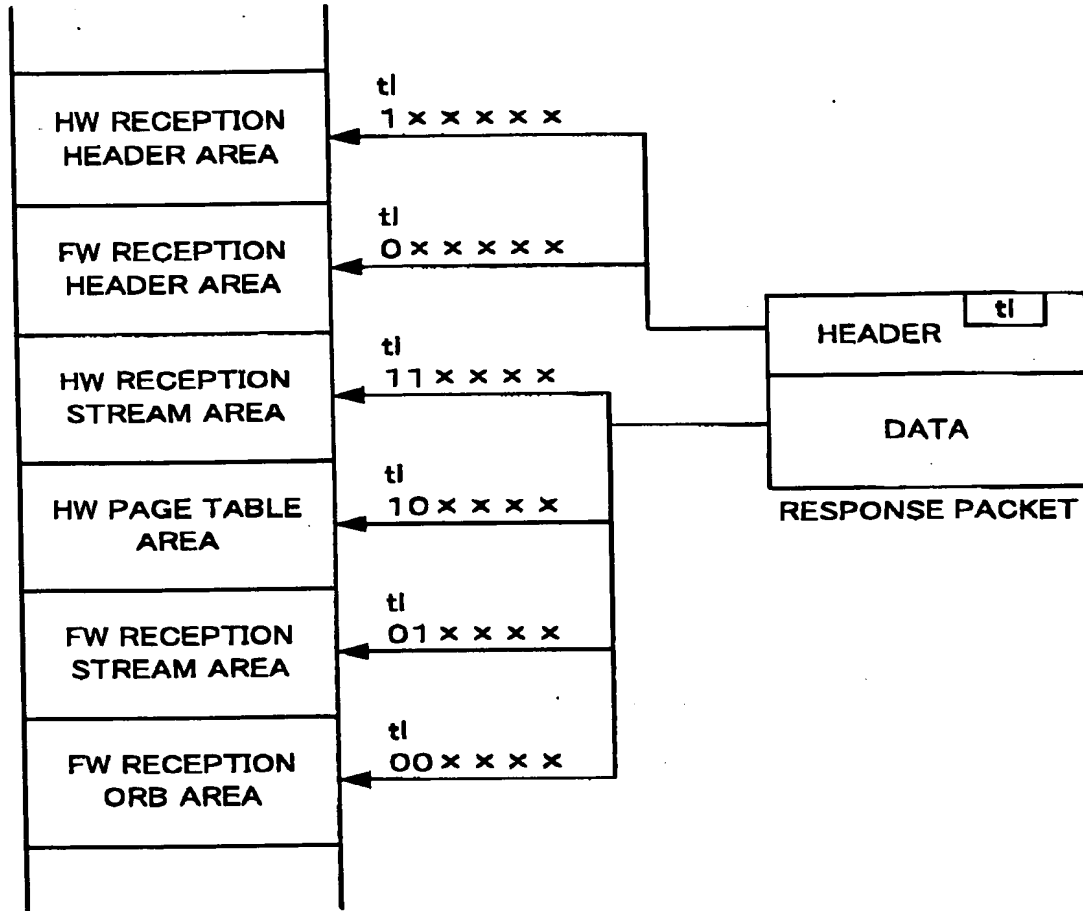 

RAM (PACKET STORAGE MEANS)

09588045-101200

FIG. 29A

29/30

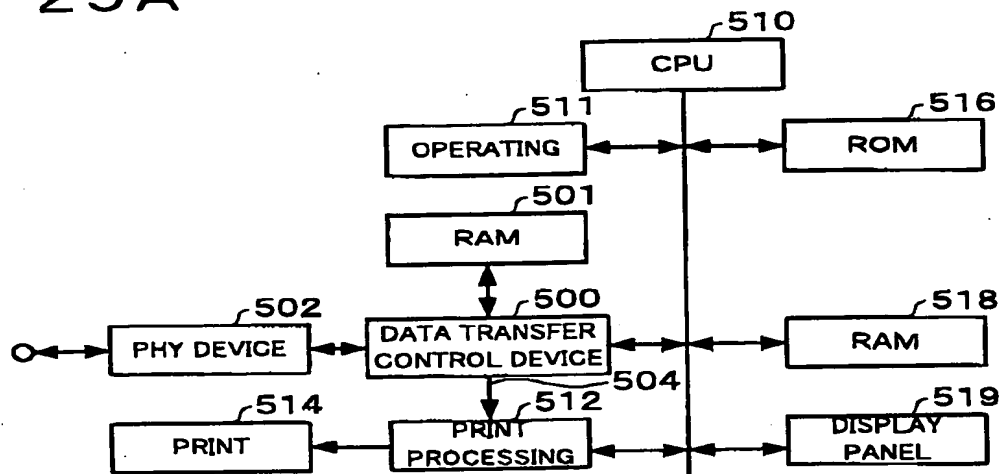 


FIG. 29B


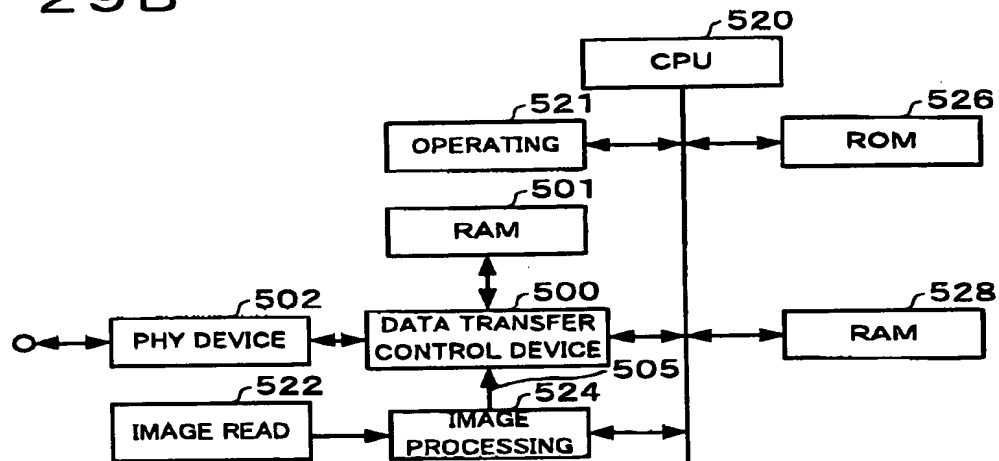 


FIG. 29C

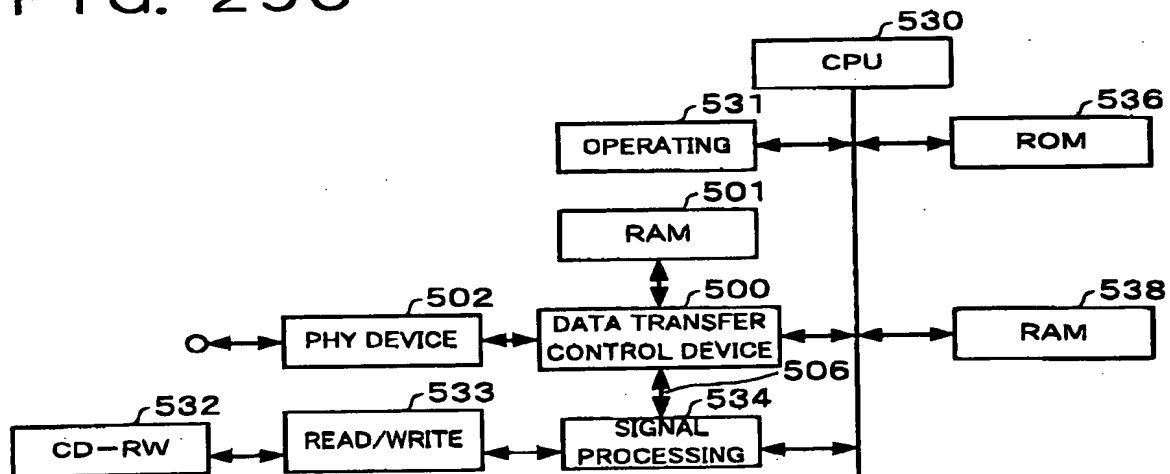 

09638045-101200

FIG. 30A

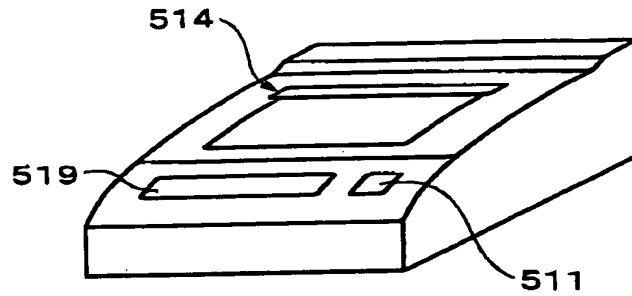 


FIG. 30B


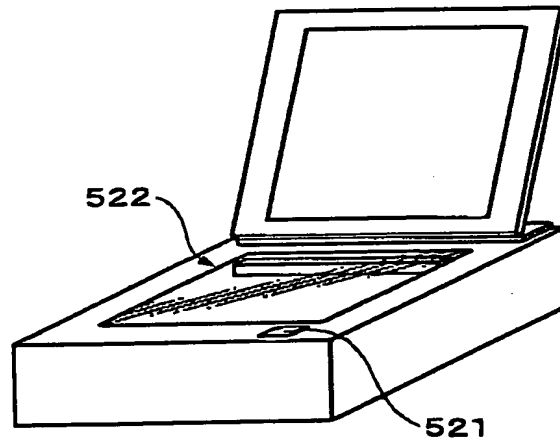 


FIG. 30C

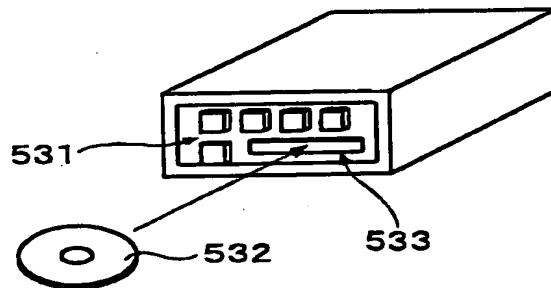 

002101" 54038950